

This high magnification lens with beam splitter for axial illumination is optimized for 16k with 5 μ m (82 mm) line scan sensors. Optimized for a specific magnification of 5.0x the lens provides high performance in a compact and robust package. The V70-Mount interface makes it easy to install numerous mounts and allows the rotation of the lens into the best azimuth.

Key features

- Designed for 16k / 5 µm line scan sensors
- Optiized for 5.0x magnification
- Diffraction limited design
- With beam splitter for coaxial illumination


Applications

- FPD inspection
- PCB inspection
- Micro defect detection
- AOI (Automated Optical Inspection)

Technical specifications		
Type [with beamsplitter]	V70-BS	
ID [with beamsplitter]	1099014	
Interface	V70-Mount	
Focal length [mm]	82	
F/# range	F/1.6 F/11	
Numerical aperture [object image]	0.21 0.04	
Max. sensor size [mm]	82	
Max. angle of view [°]	8	
Rec. magnification range	-5 (-4.95.1)	
Rec. working distance range [mm]	35.1 (35.5 34.8)	
Max. mechanical focus travel [mm]	24.4	
Filter thread [mm]	M58x0,75	
Storage temperature [°C]	0 +50	
Net. weight [standard] [g]	1170	
Additional info	Max. chief ray angle in object space = 2.9°	
f'eff [mm]	81.82	
SF [mm]	-18.79	
S'F' [mm]	-29.60	
HH' [mm]	-16.10	
ß'P	0.81	
SEP [mm]	82.70	
S'AP [mm]	-95.57	
Σd [mm]	160,10	




MTF charts						
Spectrum name	VIS LED					
Wavelengths [nm]	425	475	525	575	625	675
Rel. weights [%]	1.5	13.6	26.5	27.8	24.2	6.4

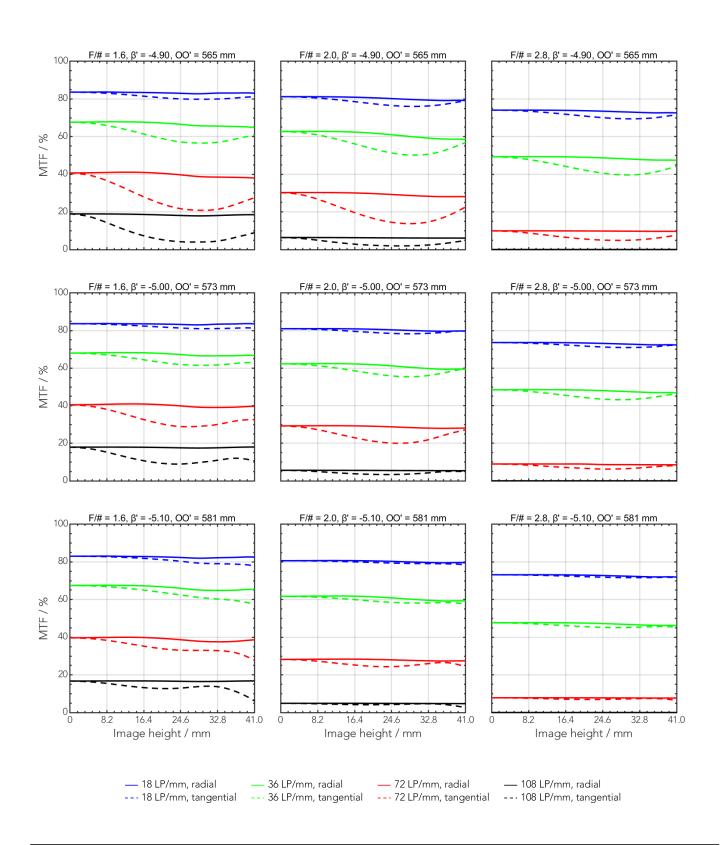



Rel. illumination vs. image height

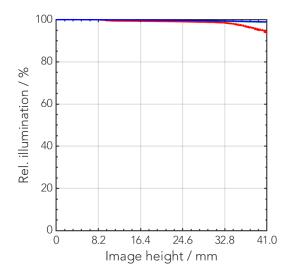

```
- F/# = 1.6, \beta = -4.90

- F/# = 2.0, \beta = -4.90

- F/# = 2.8, \beta = -4.90

- F/# = 1.6, \beta = -5.00


- F/# = 2.0, \beta = -5.00

- F/# = 2.8, \beta = -5.10

...... F/# = 2.0, \beta = -5.10


..... F/# = 2.0, \beta = -5.10
```

Distortion vs. image height

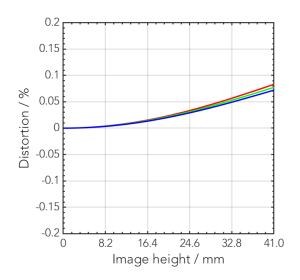



Transmittance vs. wavelength

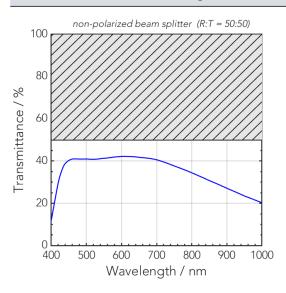





Technical drawings

* WD and s'A in air at beta' -5.00

view without transport protection

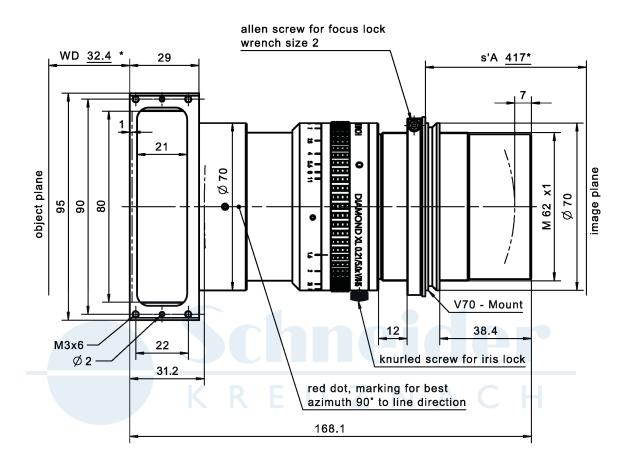

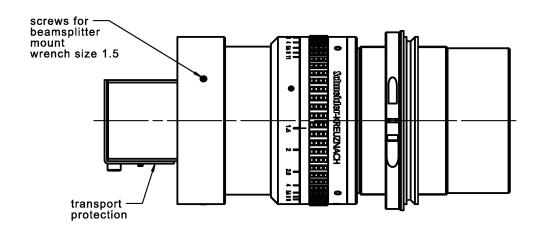



Accessories	Mount	Eff. length	ID
Adapter	V70 / M72 x 0.75	10 mm	1072419
	M72 x 0.75 / M42 x 1	6 mm	1079515
	M72 x 0.75 / M58 x 0.75	4 mm	1075556
	M72 x 0.75 / M90 x 1	4 mm	1084879
	M72 x 0.75 / M95 x 1	4 mm	1077013
Extension tube	M72 x 0.75 / M72 x 0.75	5 mm	1072420
	M72 x 0.75 / M72 x 0.75	10 mm	1072421
	M72 x 0.75 / M72 x 0.75	25 mm	26406
	M72 x 0.75 / M72 x 0.75	50 mm	1054733
	M72 x 0.75 / M72 x 0.75	100 mm	1079483
	M90 x 1 / M90 x 1	10 mm	1084875
	M90 x 1 / M90 x 1	25 mm	1084876
	M90 x 1 / M90 x 1	50 mm	1084877
	M90 x 1 / M90 x 1	100 mm	1084878
	M95 x 1 / M95 x 1	10 mm	1077290
	M95 x 1 / M95 x 1	25 mm	1062892
	M95 x 1 / M95 x 1	50 mm	1062893
	M95 x 1 / M95 x 1	100 mm	1062894
	M95 x 1 / M95 x 1	200 mm	1077291



Annotation		
Focal length	Nominal focal length	
F/# range	Image space F-number range for infinity focus position	
Numerical aperture	Maximum real numerical aperture (depending on recommended magnification range either for infinity or respective fixed magnification)	
Max. sensor size	Image circle diameter	
Max. angle of view	Angle of view associated with maximum sensor size (depending on recommended magnification range either for infinity or respective fixed magnification)	
Rec. magnification range	Magnification range as recommended by Schneider-Kreuznach	
Rec. working distance range	Working distance, i.e. distance between object and first mechanical element, associated with recommended magnification range	
Max. mechanical focus travel	Maximum possible movement of the lens from infinity position (depending on recommended magnification range either for infinity or respective fixed magnification)	
Net weight	weight of unpacked lens without lens cap	
f'eff	Effective focal length	
SF	Distance between vertex of first lens surface and object space focal point	
S'F'	Distance between vertex of last lens surface and image space focal point (back focal distance at infinity)	
HH'	Distance between principal planes	
β'P	Pupil magnification (= exit pupil diameter / entrance pupil diameter)	
SEP	Distance between vertex of first lens surface and entrance pupil	
S'AP	Distance between vertex of last lens surface and exit pupil	
Σd	Distance between vertices of first and last lens surface	
s'A	Flange focal distance (in air) for infinite object distance (depending on recommended magnification range either for infinity or respective fixed magnification)	
ß'	Magnification (= image size / object size), negative value because image is inverted	
00'	Distance between object and image	

Unless otherwise stated all dimensions in this data sheet are in mm.



Headquarters Europe

Jos. Schneider Optische Werke GmbH

Ringstraße 132

55543 Bad Kreuznach

+49 671 601 205

☑ cs@schneiderkreuznach.com

www.schneiderkreuznach.com

Offices Worldwide

America

@ +1 800 228 1254 (West Coast)

☑ info@schneideroptics.com

Asia

+86 755 8832 1170

☑ info@schneider-asiapacific.com