
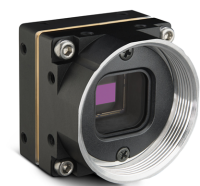


INSTALLATION GUIDE

FIREFLY[®]

INDUSTRIAL MACHINE VISION CAMERAS

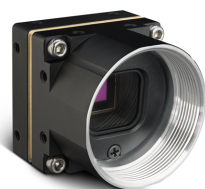

USB[™]
VISION

Version 1.8
Revised 1/22/2024

FCC Compliance

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesirable operation.

Korean EMC Certification

The KCC symbol indicates that this product complies with Korea's Electrical Communication Basic Law regarding EMC testing for electromagnetic interference (EMI) and susceptibility (EMS). This equipment has received a conformity assessment for use in a business environment, and it may cause radio frequency interference if it is used in a home environment.

This equipment is classified as Class A industrial equipment.

Hardware Warranty

The warranty for the Firefly camera is 3 years. For detailed information on how to repair or replace your camera, please see the [terms and conditions on our website](#).

Export Control

The ECCN for this product is EAR099.

WEEE

The symbol indicates that this product may not be treated as household waste. Please ensure this product is properly disposed as inappropriate waste handling of this product may cause potential hazards to the environment and human health. For more detailed information about recycling of this product, please contact us.



Trademarks

Names and marks appearing on the products herein are either registered trademarks or trademarks of Teledyne FLIR, LLC and/or its subsidiaries.

Licensing

To view the licenses of open source packages used in this product please see [What open source packages does firmware use?](#)

Table of Contents

1 Firefly Camera Installation Guide	1
2 Handling Precautions and Camera Care	2
3 Firefly Camera Installation	3
3.1 Preparing for Installation	3
3.2 Installing your Interface Card and Software	4
3.3 Installing Your Firefly Camera	4
3.4 Powering Your Firefly Camera	5
4 Tools to Control your Firefly Camera	6
4.1 Using the Spinnaker® SDK	6
4.1.1 SpinView Camera Evaluation Application	6
4.1.2 Custom Applications Built with the Spinnaker API	6
4.2 Using GenICam Applications	7
5 Configuring Firefly Camera Setup	8
5.1 Configuring the Camera Driver	8
5.2 Firefly Camera Firmware	9
5.2.1 Determining Firmware Version	9
5.2.2 Upgrading Firmware	9
6 Firefly Camera Physical Interface	11
6.1 Firefly Camera Physical Description	11
6.2 Firefly Camera Dimensions	12
6.2.1 Firefly Camera Dimensional Drawing S-mount	12
6.2.2 Firefly Camera Dimensional Drawing C-mount	13
6.2.3 Firefly Camera Dimensional Drawing CS-mount	14
6.3 Interface Connector	15
6.3.1 USB 3.1 Connector	15
6.4 Interface Cables	15
6.5 General Purpose Input/Output (GPIO)	16
6.6 Interface Card	17
6.7 Mounting your Firefly Camera	17
6.8 Camera Temperature and Heat Dissipation	17

6.9 Lens Mounting	18
6.9.1 Back Flange Distance	18
6.10 Non-Volatile Flash Memory	18
6.11 Dust Protection	18
6.12 Readout Method	20
6.12.1 Global Shutter	20
7 Input/Output Control	21
7.1 General Purpose Input/Output (GPIO)	21
7.2 GPIO Electrical Characteristics	23
7.3 Input Timing Characteristics	24
7.4 Output Timing Characteristics	25
8 Troubleshooting	26
8.1 Support	26
8.2 Status Indicator LED	27
Contacting Us	28
Revision History	28

1 Firefly Camera Installation Guide

Welcome to the Firefly camera. We offer a number of resources to assist you with your camera.

- **Spinnaker SDK**—software development kit that provides GenICam-compliant controls to create applications for the camera. Spinnaker is available for download. Each installation includes API documentation for C, C++, and C#.
- **Release Notes**—information about the current firmware release including feature additions or changes, bug fixes, and known issues.
- **Specifications**—information about the camera model as it performs with the current firmware.
- **Getting Started**—quick start guide for installing the camera and software.
- **Installation Guide**—information about installing the camera and SDK, the physical interface and mechanical properties, troubleshooting and how to get help. This document is available as a PDF for download or as a webpage included in the firmware release package.
- **Technical Reference**—information about the features supported by the camera model with the current firmware, including: image format control, acquisition control, sequencing, binning/decimation, and others. This document is available as a PDF for download or as a webpage included in the firmware release package.
- **Firmware**—programming inserted into the programmable ROM of the camera that can be updated in-field. New firmware packages are available for download and include both the firmware file and documentation.

These resources as well as knowledge base articles and application notes can be found on the Support page for the product.

[Firefly S Camera Support Articles](#)

[Firefly S Camera Resources](#)

[Firefly DL Camera Support Articles](#)

[Firefly DL Camera Resources](#)

2 Handling Precautions and Camera Care

Warning! Do not open the camera housing. Doing so voids the Hardware Warranty described in the [Terms and Conditions](#) on our website.

Your Teledyne FLIR machine vision camera is a precisely manufactured device and should be handled with care. Here are some tips on how to care for the device.

- Avoid electrostatic charging.
- When handling the camera unit, avoid touching the lenses. Fingerprints will affect the quality of the image produced by the device.
- To clean the lenses, use a standard camera lens cleaning kit or a clean dry cotton cloth. Do not apply excessive force.
- Extended exposure to bright sunlight, rain, dusty environments, etc. may cause problems with the electronics and the optics of the system.
- Avoid excessive shaking, dropping or any kind of mishandling of the device.

Related Knowledge Base Articles

[Cleaning the imaging surface of your camera](#)

3 Firefly Camera Installation

3.1 Preparing for Installation

Will your system support your camera?

Recommended System Configuration:

- **OS**—Windows or Linux (32- or 64-bit)
- **CPU**— Intel i5 or greater
- **RAM**—4 GB
- **Ports**—USB3 host controller
- **Software**—Microsoft Visual Studio to run/compile example code

Have you visited our website?

A downloads account is required to download software and firmware.

1. Go to www.flir.com/account.
2. Enter your email address and click Continue.
3. Complete the Create an account form and click Continue.
4. You will receive an email with a link to activate your account.
5. Once activated, you can login using your credentials.

The [Firefly camera resources page](#) has many links to help you operate your camera effectively, including:

- Spinnaker[®] SDK software, including drivers (login required)
- Firmware updates and release notes (login required)
- Dimensional drawings and CAD models
- Documentation

Do you have all the parts you need?


To install your camera you need the following components:

- For USB3 cameras—USB3 cable (see [Interface Cables](#))
- GPIO cable (see [General Purpose Input/Output \(GPIO\)](#))
- Lens (see [Lens Mounting](#)) (type of lens mount is model dependent)
- Tripod adapter (optional) (see [Mounting your Firefly Camera](#))
- Interface card (see [Interface Card](#))

Teledyne FLIR sells a number of the additional parts required for installation. To purchase, visit the [Accessories page](#).

3.2 Installing your Interface Card and Software

1. Install your Interface Card

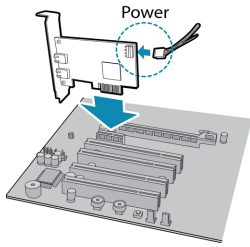

Ensure the card is installed per the manufacturer's instructions.

Connect the internal IDE or SATA power connector on the card to the computer power supply.

Alternatively, use your PC's built-in host controller, if equipped.

Open the Windows Device Manager. Ensure the card is properly installed. USB3 cards appear under **Universal Serial Bus Controllers**. An exclamation point (!) next to the card indicates the driver has not yet been installed.

2. Install the Spinnaker® SDK Software

Note: For existing users who already have Spinnaker installed, we recommend ensuring you have the latest version for optimal performance of your camera. If you do not need to install Spinnaker, use SpinView to install and enable drivers for your card.

- a. Go to the [Spinnaker SDK Download](#) page. If you are not already logged in, you are prompted to login.
- b. Click the Download Now button.
- c. Select your operating system and version.
- d. After download is complete, open the file to start the Spinnaker setup wizard.
- e. Follow the steps in each setup dialog.

3.3 Installing Your Firefly Camera

1. Install the Tripod Mounting Bracket (optional)




The ASA and ISO-compliant tripod mounting bracket attaches to the camera using the included screws.

2. Attach a Lens

Install a lens.


3. Connect the interface Card and Cable to the Camera



Plug the interface cable into the host controller card and the camera. The cable jack screws can be used for a secure connection.

When the camera is first connected, the operating system automatically installs the camera driver. Camera drivers are available with the Spinnaker SDK installation.

4. Plug in the GPIO connector if required



GPIO can be used for trigger, serial input output, and strobe.

5. Confirm Successful Installation

Run the SpinView application: **Start**→**Teledyne Spinnaker SDK**→**SpinView**

The SpinView application can be used to test the camera's image acquisition capabilities.

Changes to your camera's installation configuration can be made using the SpinView application.

3.4 Powering Your Firefly Camera

Power must be provided through the USB3 interface.

The camera does not transmit images for the first 100 ms after power-up. The auto-exposure and auto-white balance algorithms do not run while the camera is powered down. It may therefore take several images to get a satisfactory image.

When the camera is power cycled (power disengaged then re-engaged), the camera reverts to its default factory settings, or if applicable, a saved user set.

Related Knowledge Base

Articles

[How can I power my USB3 camera?](#)

4 Tools to Control your Firefly Camera

The Firefly camera's features can be accessed using various controls, including:

- [Spinnaker SDK](#) including API examples
- SpinView camera evaluation application, included in the Spinnaker SDK installation
- Third-party GenICam applications

4.1 Using the Spinnaker[®] SDK

You can monitor or control features of the camera through Spinnaker API examples provided in the Spinnaker SDK, or through the SpinView camera evaluation application. A *Programmer's Guide and API Reference* is included in the installation.

The Spinnaker SDK is available for download from the [Spinnaker page](#).

4.1.1 SpinView Camera Evaluation Application

The SpinView application is a generic, easy-to-use streaming image viewer included with the Spinnaker SDK that can be used to test many of the capabilities of your camera. It allows you to view a live video stream from the camera, save individual images, adjust the various attributes, frame rates, features and settings of the camera. It includes tools for updating firmware, managing drivers, and activity logging.

4.1.2 Custom Applications Built with the Spinnaker API

The Spinnaker SDK includes a full Application Programming Interface that allows you to create custom applications to control your camera. Included with the SDK are a number of source code examples to help you get started.

Spinnaker API examples are provided for C, C++, C#, and VB.NET languages. These examples are precompiled for your convenience.

4.2 Using GenICam Applications

USB3 Vision is a communication interface for vision applications based on the USB3 technology. All cameras supporting USB3 Vision interact the same way with software also supporting USB3 Vision.

For more information on the standard, visit visiononline.org.

The standard defines required elements for camera identification, control, and output. It uses GenICam, a programming interface for camera attribute control. GenICam allows camera vendors to define features and attributes in an XML file stored inside the camera. The file is parsed by the host application when the camera is initially discovered. One of the key benefits of GenICam is the ability for camera vendors to introduce new camera-specific features without needing to update the host application.

Each camera attribute, such as exposure time, is controlled by a specific GenICam feature. The camera includes an XML device description file for interfacing with third-party GenICam-compliant APIs.

For more information on GenICam, visit emva.org.

Getting Started with Third-Party Applications Resources

[Getting Started with OpenCV](#)

[Getting Started with MATLAB](#)

[Getting Started with MVTec HALCON](#)

[Getting Started with Cognex VisionPro](#)

[Getting Started with Adaptive Vision](#)

[Getting Started with Matrox Imaging Library](#)

[Getting Started with Matrox Design Assistant](#)

[Getting Started with NI-MAX and LabVIEW](#)

[Getting Started with NI Vision Builder for Automatic Inspection](#)

USB3 Vision and Third-Party Applications Resources

[Using USB3 Vision cameras with National Instruments' Acquisition Software](#)

[Using USB3 Vision cameras with A&B Software's ActiveUSB](#)

[Using USB3 Vision cameras with Matrox Imaging Library](#)

[Using USB3 Vision cameras with MVTec's Halcon software](#)

[Using USB3/USB2 cameras with Cognex VisionPro](#)

5 Configuring Firefly Camera Setup

After successful installation of your camera and interface card, you can make changes to the setup. Use the tools described below to change the driver for your interface card.

For information on updating your camera's firmware post installation, see [Firefly Camera Firmware](#).

5.1 Configuring the Camera Driver

The driver is installed automatically by the Spinnaker SDK installer for Camera Evaluation or for Application Development if the Drivers checkbox is selected (default). A restart may be required.

Note: For optimal driver performance, install Spinnaker version 4.0 or later.

To manage and update drivers use the SpinView application:

1. Start SpinView:
Start Menu → Teledyne Spinnaker SDK → SpinView
2. From the Devices list, select the camera and click the Switch Driver button.



3. Select the driver from the drop-down list.
4. Click Install Driver.

5.2 Firefly Camera Firmware

Firmware is programming that is inserted into the programmable read-only memory (programmable ROM) of most Teledyne FLIR cameras. Firmware is created and tested like software. When ready, it can be distributed like other software and installed in the programmable read-only memory by the user.

The latest firmware versions often include significant bug fixes and feature enhancements. To determine the changes made in a specific firmware version, consult the Release Notes.

Firmware is identified by a version number, a build date, and a description.

5.2.1 Determining Firmware Version

To determine the firmware version number of your camera:

- Query the GenICam Device Control feature DeviceFirmwareVersion.

5.2.2 Upgrading Firmware

Firmware can be upgraded or downgraded to later or earlier versions using SpinView, part of the Spinnaker SDK.

Before upgrading firmware:

- Install the **Spinnaker SDK**, available from the [Spinnaker page](#).
- Download the latest **model package** zip file for the product, available from the camera's support page Downloads tab:

[FFY-S Support Downloads](#) [FFY-DL Support Downloads](#)

To upgrade the firmware:

1. **Start**→**Teledyne Spinnaker SDK**→**SpinView**
2. From the Device list, right click the camera and select Update Device Firmware.
If you get a Device is Active warning, close the Display pane or click the Disconnect button and right click the camera again.
3. Browse to select the firmware file and click Open.
4. Click Yes to continue.

Warning! Do not disconnect the camera during the firmware update process.

Related Knowledge Base Articles


[Teledyne FLIR machine vision software and firmware version numbering systems](#)

[Determining my camera's firmware version](#)

[Should I upgrade my camera firmware or software?](#)

6 Firefly Camera Physical Interface

6.1 Firefly Camera Physical Description

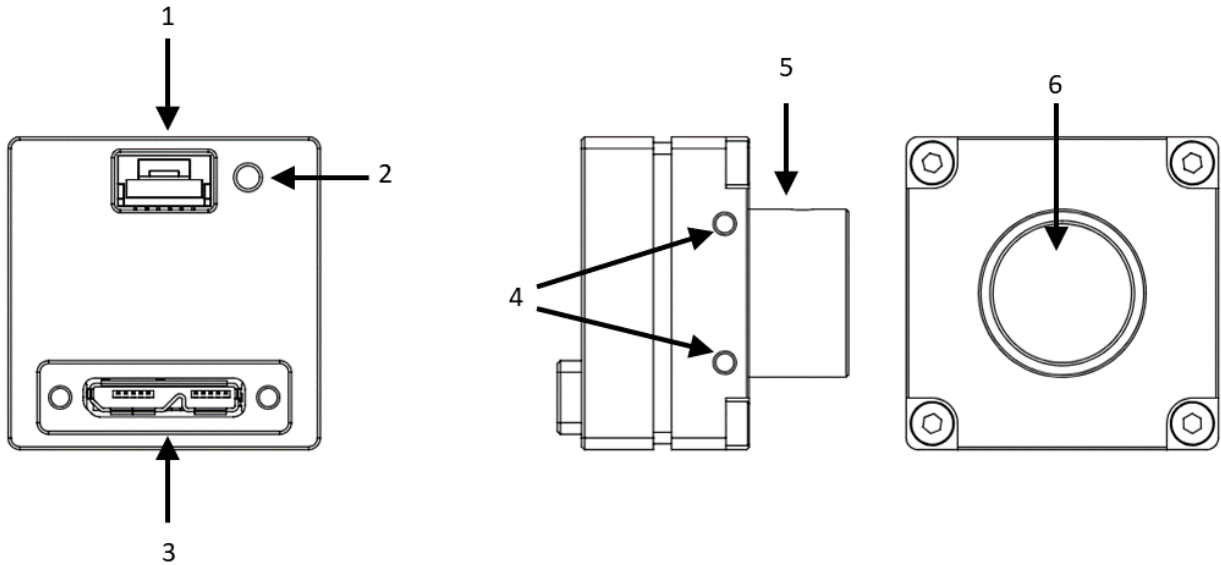

1. General purpose I/O connector

See [General Purpose Input/Output \(GPIO\)](#)

2. Status LED

See [Status Indicator LED](#)

3. Interface connector

See [Interface Connector](#)

4. Mounting holes

See [Mounting your Firefly Camera](#)

5. Lens mount

See [Lens Mounting](#)

6. Glass/IR filter system Interface connector


See [Dust Protection](#) and [Infrared Cut-Off Filters—Cased Models](#)

6.2 Firefly Camera Dimensions


Download 3D CAD Models / Drawings:

[FFY-U3 CAD Models](#)


6.2.1 Firefly Camera Dimensional Drawing S-mount

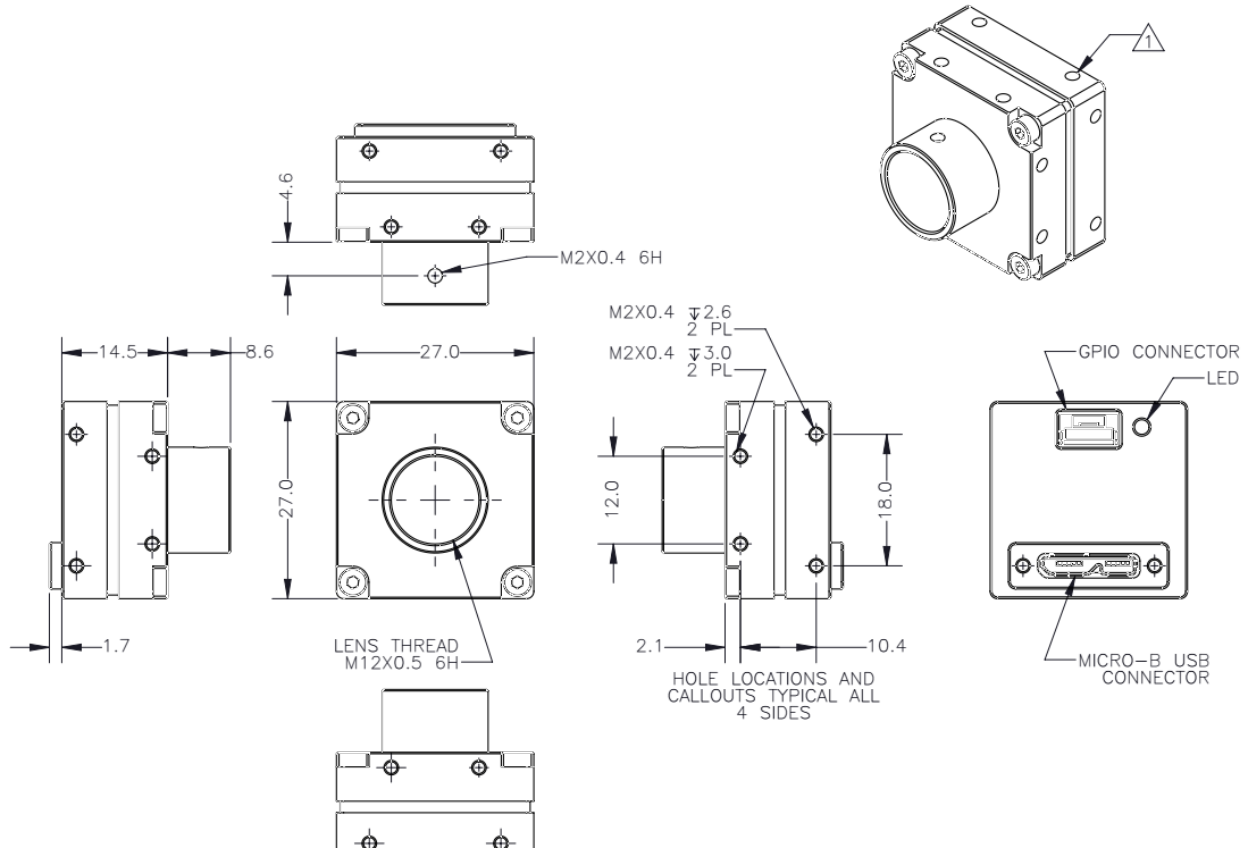

6.2.2 Firefly Camera Dimensional Drawing C-mount

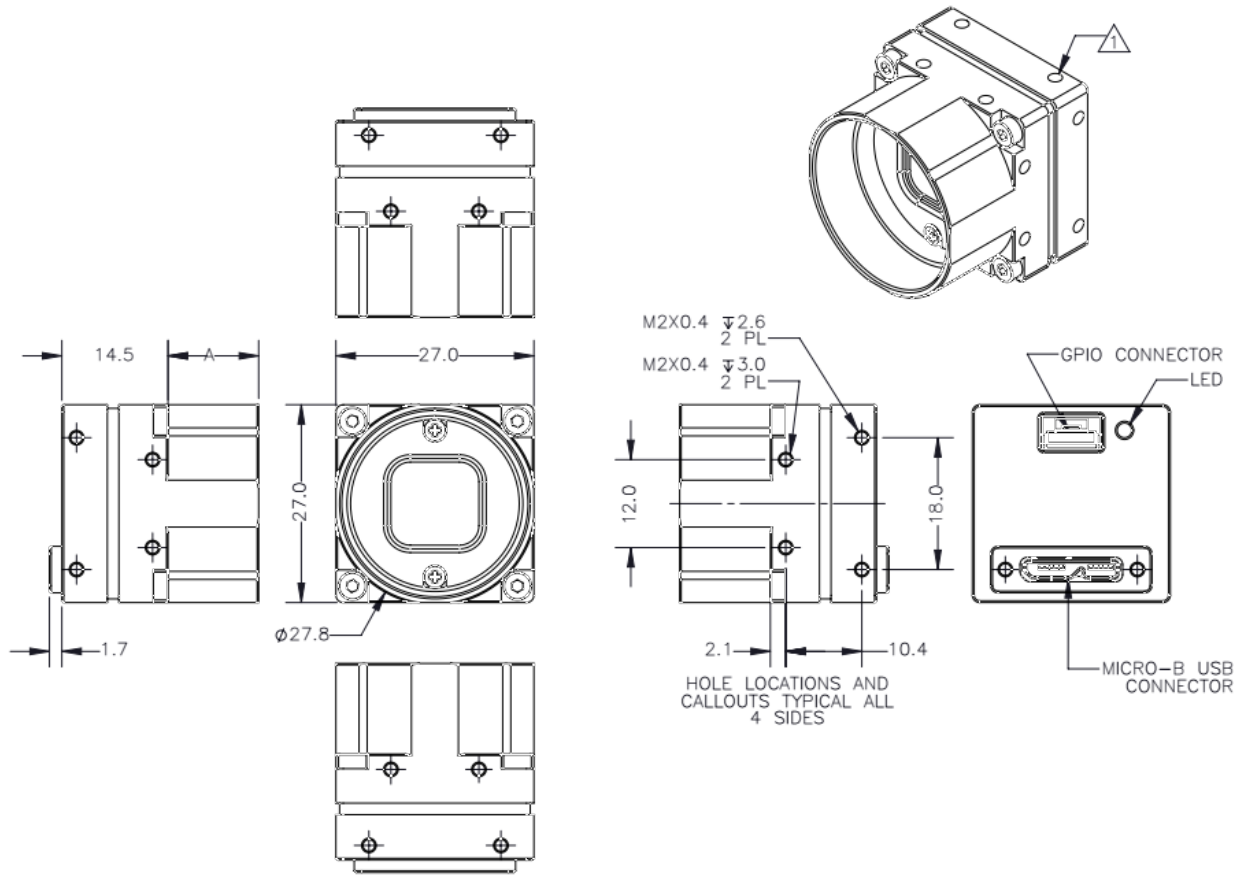

6.2.3 Firefly Camera Dimensional Drawing CS-mount

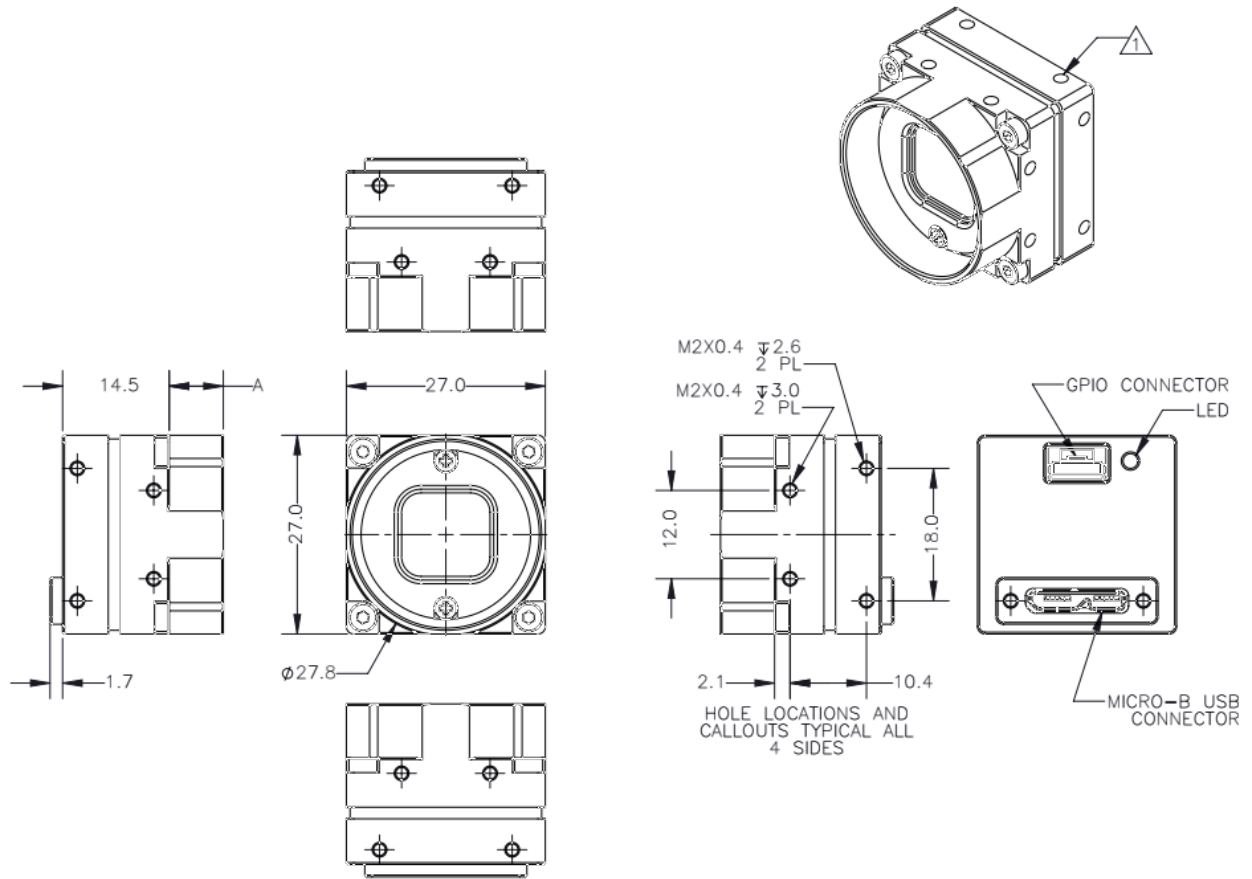

6.3 Interface Connector

6.3.1 USB 3.1 Connector

The camera is equipped with a USB 3.1 Micro-B connector that is used for data transmission, camera control and power. For more detailed information, consult the USB 3.1 specification available from <http://www.usb.org/developers/docs/>.



USB 3.1 Micro B Connector

USB 3.1 Micro-B Connector Pin Assignments

Pin	Signal Name	Description
1	VBUS	Power
2	D-	USB 2.0 differential pair
3	D+	
4	ID	OTG identification
5	GND	Ground for power return
6	MicB_SSTX-	SuperSpeed transmitter differential pair
7	MicB_SSTX+	
8	GND_DRAIN	Ground for SuperSpeed signal return
9	MicB_SSRX-	SuperSpeed receiver differential pair
10	MicB_SSRX+	

The USB 3.1 Micro-B receptacle accepts a USB 2.0 Micro-B plug and, therefore, the camera is backward compatible with the USB 2.0 interface.

Note: When the camera is connected to a USB 2.0 interface, it runs at USB 2.0 speed, and maximum frame rates are adjusted accordingly based on current imaging parameters.

6.4 Interface Cables

To purchase a recommended cable from Teledyne FLIR, visit the [Products Accessories](#) page.

The USB3 standard does not specify a maximum cable length.

Note: A 5-meter USB3 cable (or longer) is not recommended for laptops or on board controllers.

Related Knowledge Base Articles

[Extending the Working Distance of USB3 Cameras](#)

6.5 General Purpose Input/Output (GPIO)

The camera is equipped with a 6-pin GPIO connector. The connector is a JST BM06B-NSHSS-TBT (LF)(SN), the mating connector is a JST NSHR-06V-S.

See [Input/Output Control](#) for details on pin assignments and electrical characteristics.

6.6 Interface Card

The camera must connect to an interface card. This is sometimes called a host adapter, a bus controller, or a network interface card (NIC).

Note: For optimal video streaming and camera control performance, we recommend an Intel Pro chipset on a PCIe interface.

In order to achieve the maximum benefits of USB3, the camera must connect to a USB3 PCIe 2.0 card. The card must be connected to the PC power supply in order to power the camera through the USB3 interface.

To purchase a compatible card from Teledyne FLIR, visit the [Products Accessories](#) page.

6.7 Mounting your Firefly Camera

Using the Case

The case is equipped with 8 M2 x 0.4 mounting holes on the top, bottom, left side, and right side.

6.8 Camera Temperature and Heat Dissipation

You must provide sufficient heat dissipation to control the internal operating temperature of the camera.

The camera is equipped with an on-board temperature sensor. It allows you to obtain the temperature of the camera board-level components. The sensor measures the ambient temperature within the case.

As a result of packing the camera electronics into a small space, the camera can become hot when running. This is expected behavior and will not damage the camera electronics.



Warning! To avoid possible burns do not touch the camera while in operation. Wait at least 15 minutes after powering off before touching.

To reduce heat, use a cooling fan to set up a positive air flow around the camera, taking into consideration the following precautions:

- Mount the camera on a heat sink, such as a camera mounting bracket, made out of a heat-conductive material like aluminum.
- Make sure the flow of heat from the camera to the bracket is not blocked by a non-conductive material like plastic.
- Make sure the camera has enough open space around it to facilitate the free flow of air.

6.9 Lens Mounting

Lenses are not included with cameras. Teledyne FLIR sells a number of lenses compatible with our cameras from [our website](#). There is also a [Lens Calculator](#) to help choose an appropriate lens.

Related Knowledge Base Articles

[Selecting a lens for your camera](#)

6.9.1 Back Flange Distance

The Back Flange Distance (BFD) is offset due to the presence of both a 1 mm infrared cutoff (IRC) filter (color models only) and a 0.5 mm sensor package window. These two pieces of glass fit between the lens and the sensor image plane. The IRC filter is installed on color cameras. In monochrome cameras, it is a transparent piece of glass. The sensor package window is installed by the sensor manufacturer. Both components cause refraction, which requires some offset in flange back distance to correct.

6.10 Non-Volatile Flash Memory

The Firefly camera has 24 MB of non-volatile flash memory for users to store data.

Related Knowledge Base Articles

[Storing data in on-camera flash memory](#)

[Removing the IR filter from a color camera](#)

[Selecting a lens for your camera](#)

6.11 Dust Protection

The camera housing is designed to prevent dust from falling directly onto the sensor's protective glass surface. This is achieved by placing a piece of clear glass (monochrome camera models) or an IR cut-off filter (color models) that sits above the surface of the sensor's glass. A removable plastic retainer keeps this glass/filter system in place. By increasing the distance between the imaging surface and the location of the potential dust particles, the likelihood of interference from the dust (assuming non-collimated light) and the possibility of damage to the sensor during cleaning is reduced.

Warning! Cameras are sealed when they are shipped. To avoid contamination, seals should not be broken until cameras are ready for assembly on site.

Warning! Use caution when removing the protective glass or filter. Damage to any component of the optical path voids the Hardware Warranty. Removing the protective glass or filter alters the optical

path of the camera, and may result in problems obtaining proper focus with your lens.

Related Knowledge Base Articles


[Removing the IR filter from a color camera](#)

[Selecting a lens for your camera](#)

6.12 Readout Method

6.12.1 Global Shutter

For cameras with a global shutter sensor, for each frame all of the lines start and stop exposure at the same time. The exposure time for each line is the same. Following exposure, data readout begins. The readout time for each line is the same but the start and end times are staggered. Readout time for a line is equal to $1/\text{Horizontal Line Frequency}$.

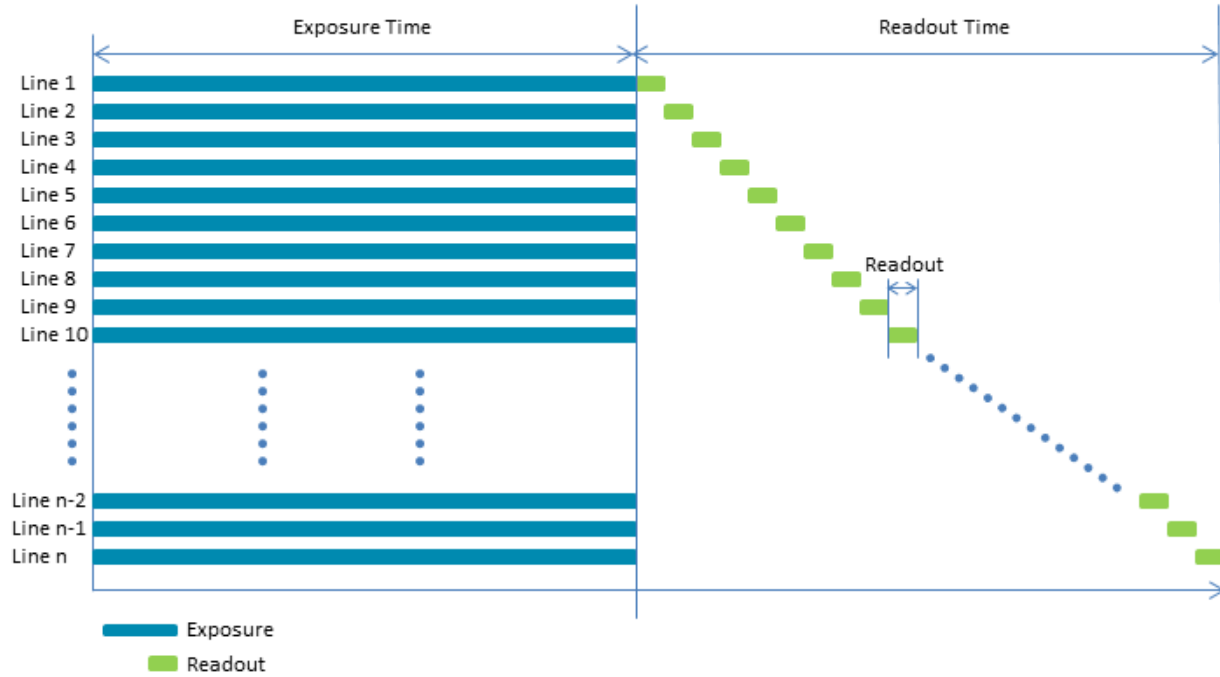


Some advantages of global shutter are more uniform brightness and minimal motion blur.

7 Input/Output Control

7.1 General Purpose Input/Output (GPIO)

The camera is equipped with a 6-pin GPIO connector. The connector is a JST BM06B-NSHSS-TBT (LF)(SN), the mating connector is a JST NSHR-06V-S.

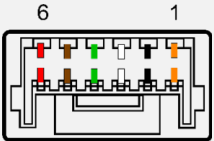Diagram	Color ¹	Pin	Line	Function	Description	Parameters	Min	Max	Unit
	Orange	1 ²	0	GPIO0	Non-isolated Input/Output TXD (output) for 1.8 V UART	Input Low Level	0	1.4	V
						Input High Level	2.6	24	V
						Propagation Delay		1	µs
						Output Low Current		25	mA
						Output High Level	0	24	V
	Black	2 ²	1	GPIO1	Non-isolated Input/Output RXD (input) for 1.8 V UART	Input Low Level	0	1.4	V
						Input High Level	2.6	24	V
						Propagation Delay		1	µs
						Output Low Current		25	mA
						Output High Level	0	24	V
	White	3	2	GPIO2	Non-isolated Input/Output	Input Low Level	0	1.4	V
						Input High Level	2.6	24	V
						Propagation Delay		1	µs
						Output Low Current		25	mA
						Output High Level	0	24	V
	Green	4	3	GPIO3	Non-isolated Input/Output	Input Low Level	0	1.4	V
						Input High Level	2.6	24	V
						Propagation Delay		1	µs
						Output Low Current		25	mA
						Output High Level	0	7	V
	Brown	5	N/A	GND	Camera Power Ground				
Red	6	N/A	Vout	Camera Power Output	Output Voltage	3.05	3.35	V	
					Output Current		120	mA	

Measurement conditions: Non-Isolated Output: VCC=5 V, Rext=330 Ohm, Non-Isolated Input: VCC=3.3 V. Measured over operating temperature range (-20°C to +50°C ambient temperature), unless otherwise noted.

- 1—GPIO cable assembly wire colors
- 2—Dual function pin

7.2 GPIO Electrical Characteristics

The output is open collector and thus requires a pull-up resistor to operate. The rise time and bias current is determined by the resistor value chosen. If the camera is generating an output signal that approaches the rise time plus the fall time of the circuit, care must be taken to optimize the pull-up resistor chosen to minimize the rise time while still remaining within the current limits of the output circuit.

Warning! To avoid damage, connect the GND pin first before applying voltage to the GPIO line.

Warning! Prolonged use of the camera outside of the Operating Range described below may lead to unexpected behavior and should be avoided.


Operating Range

Description	Minimum	Maximum
Input Voltage	0 V	24 V
Output Voltage	0 V	7 V
Output Current		25 mA

Non-isolated External Voltage Resistor Combinations


External Voltage	External Resistor	Current
3.3 V	1.0 kΩ	3.1 mA
5 V	1.0 kΩ	4.8 mA
12 V	2.0 kΩ	6 mA
12 V	2.4 kΩ	5 mA
24 V	4.7 kΩ	5.2 mA

Values are for reference only

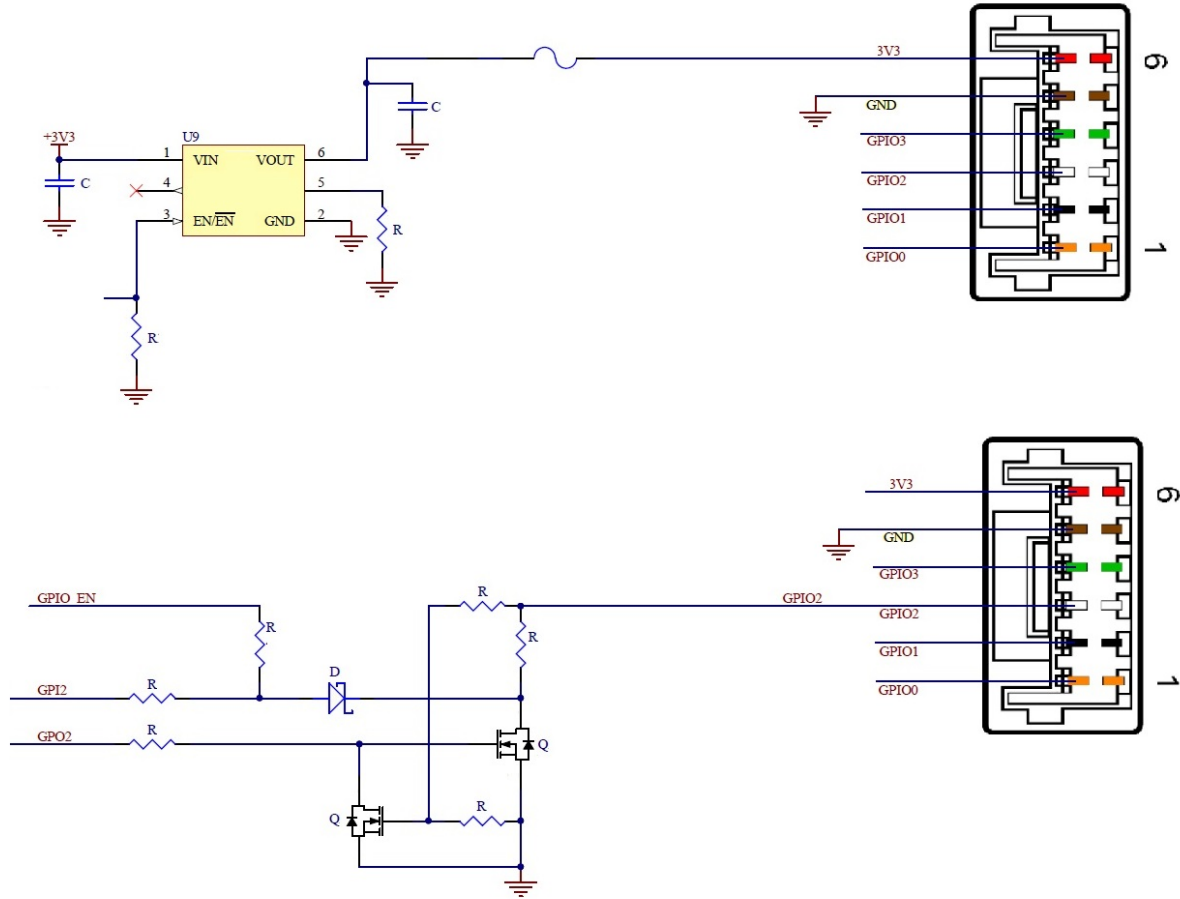

Non-isolated input and output circuit

7.3 Input Timing Characteristics

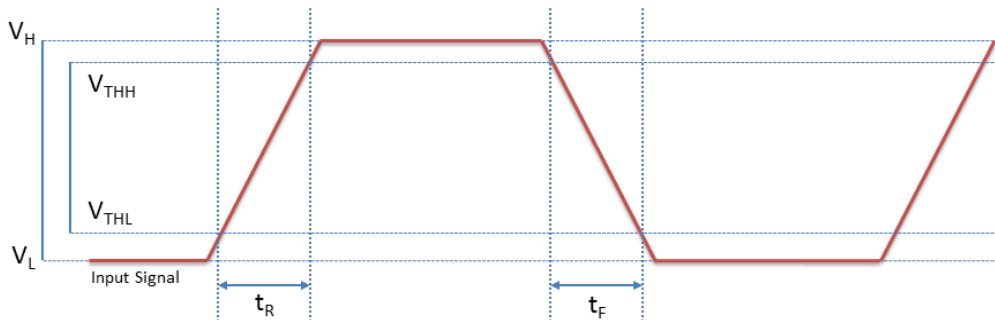


Input Timing Characteristics

Non-isolated Input Performance (measured at Vcc = 5 V, Rext = 1 kΩ)

Parameter	Symbol	Non-isolated
Input Low Voltage	V_L	0.85 V

Parameter	Symbol	Non-isolated
Input High Voltage	V_H	4.94 V
Input Threshold High Voltage	V_{THH}	4.54 V
Input Threshold Low Voltage	V_{THL}	1.26 V
Cycle Rise Time	t_R	10.8 μ s
Cycle Fall Time	t_F	2 μ s
Current		4.1 mA

7.4 Output Timing Characteristics

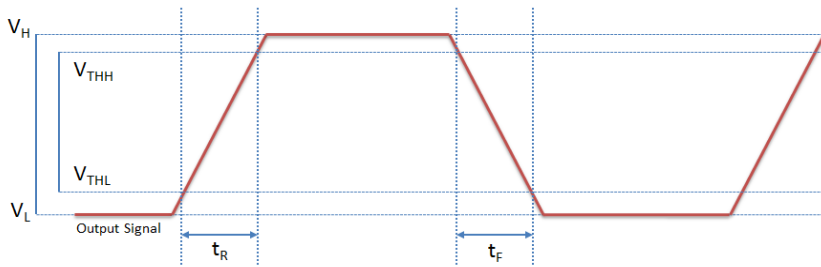

Output Timing Characteristics

Non-isolated Output Performance (measured at $V_{CC} = 5$ V, $R_{ext} = 1$ k Ω)

Parameter	Symbol	Non-isolated
Output Low Voltage	V_L	0.23 V
Output High Voltage	V_H	4.95 V
Output Threshold High Voltage	V_{THH}	4.48 V
Output Threshold Low Voltage	V_{THL}	0.7 V
Cycle Rise Time	t_R	2.6 μ s
Cycle Fall Time	t_F	0.23 μ s
Opto Current		4.8 mA

8 Troubleshooting

8.1 Support

Teledyne FLIR endeavors to provide the highest level of technical support possible to you. Most support resources can be accessed through your product's Support page.

[Firefly S Camera Support Articles](#)

[Firefly S Camera Resources](#)

[Firefly DL Camera Support Articles](#)

[Firefly DL Camera Resources](#)

The **Overview** tab contains links to:



Spinnaker SDK download



Application notes



Knowledge base articles



White papers



Warranty information

The **Documents** tab contains links to:

- EMVA Imaging Performance specification PDFs
- Datasheets
- Getting Started manual PDFs
- Product Change Notifications (PCN)
- Technical Reference manual PDFs

The **Downloads** tab contains links to:

- Camera References (HTML)
- Drawings

- Firmware

The **Media** tab contains links to videos about sensor technology and camera use.

Contacting Technical Support

Before contacting Technical Support, have you:

1. Read the product documentation?
2. Searched the Product Support page?
3. Downloaded and installed the latest version of software and/or firmware?
4. Checked out our [support community forum](#)?

If you have done all the above and still can't find an answer to your question, [contact our Technical Support team](#).

8.2 Status Indicator LED

LED	USB
No Light	No power or LED is in inactive state or LED is in error status state with no error
Blinking Green (1 blink)	USB1
Blinking Green (2 blinks)	USB2
Blinking Green (3 blinks)	USB3
Solid Green	Acquisition Started
Rapid Flashing Green	Firmware update in progress
Flashing Green and Red	General Error

Contacting Us

For any questions, concerns or comments please contact us:

Email	General questions
Support Ticket	Technical support
Support Forum	Teledyne FLIR Community
Website	Find specifications, support articles, downloads on the product page at Teledyne FLIR machine vision

Revision History

Version	Date	Description
1.0	May 24, 2019	Support for FFY-U3-16S2
1.1	June 27, 2019	Added Installing your Camera and Interface Connector sections.
1.2	September 13, 2019	Corrected power supply to be from USB3 interface only.
1.3	April 9, 2020	Updated link to contact support
1.4	May 5, 2020	Added support for C-mount and CS-mount models
1.5	September 6, 2022	Added PN of GPIO connector in Input/Output Control Updated links to camera website resources
1.6	November 29, 2022	Additional links to camera website resources
1.7	May 18, 2023	Minor formatting corrections
1.8	January 22, 2024	Clarification in camera installation