

# Installation Guide

---

TELEDYNE FLIR IIS

# ORYX<sup>®</sup> 10GIGE

INDUSTRIAL MACHINE VISION CAMERAS



**Version 5.3**  
**Revised**  
**3/20/2025**



Oryx part numbers with 10G and 10GS are functionally the same and differ only in dimensions and mass.

## FCC Compliance

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesirable operation.

## Korean EMC Certification

The KCC symbol indicates that this product complies with Korea's Electrical Communication Basic Law regarding EMC testing for electromagnetic interference (EMI) and susceptibility (EMS).

This equipment is classified as Class A industrial equipment.

This equipment has received a conformity assessment for use in a business environment, and it may cause radio frequency interference if it is used in a home environment.

주의사항

A급 기기(업무용 방송통신기자재)

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파 간섭의 우려가 있습니다.

## Hardware Warranty

The warranty for the Oryx camera is 3 years. For detailed information on how to repair or replace your camera, please see the [terms and conditions on our website](#).

## Export Control

The ECCN for the Oryx camera is EAR099.

## WEEE

The symbol indicates that this product may not be treated as household waste. Please ensure this product is properly disposed as inappropriate waste handling of this product may cause potential hazards to the environment and human health. For more detailed information about recycling of this product, please contact us.



## Trademarks

Names and marks appearing on the products herein are either registered trademarks or trademarks of Teledyne FLIR, LLC and/or its subsidiaries.

## Licensing

To view the licenses of open source packages used in this product please see [What open source packages are in Teledyne FLIR IIS products?](#)

# Table of Contents

|  |           |
|--|-----------|
| <b>1 Oryx Camera Installation Guide</b> .....                | <b>1</b>  |
| <b>2 Handling Precautions and Camera Care</b> .....          | <b>2</b>  |
| <b>3 Oryx Camera Installation</b> .....                      | <b>3</b>  |
| 3.1 Preparing for Installation .....                         | 3         |
| 3.2 Installing your Interface Card and Software .....        | 4         |
| 3.3 Installing Your Oryx .....                               | 5         |
| 3.4 Powering Your Oryx .....                                 | 5         |
| <b>4 Tools to Control your Oryx Camera</b> .....             | <b>7</b>  |
| 4.1 Using the Spinnaker® SDK .....                           | 7         |
| 4.1.1 SpinView Camera Evaluation Application .....           | 7         |
| 4.1.2 Custom Applications Built with the Spinnaker API ..... | 7         |
| 4.2 Using GenICam Applications .....                         | 8         |
| <b>5 Configuring the Oryx Camera Setup</b> .....             | <b>9</b>  |
| 5.1 Configuring the Camera Driver .....                      | 9         |
| 5.2 Configuring the IP Address .....                         | 9         |
| 5.3 Allocating Bandwidth .....                               | 10        |
| 5.3.1 Determining Bandwidth Requirements .....               | 10        |
| 5.4 Configuring Other Ethernet Settings .....                | 11        |
| 5.4.1 Stream Channel Destination Address .....               | 11        |
| 5.4.2 Heartbeat .....  | 11        |
| 5.5 Oryx Camera Firmware .....                               | 13        |
| 5.5.1 Determining Firmware Version .....                     | 13        |
| 5.5.2 Upgrading Firmware .....                               | 13        |
| <b>6 Oryx Camera Physical Interface</b> .....                | <b>15</b> |
| 6.1 Oryx Physical Description .....                          | 15        |
| 6.2 Oryx Dimensions .....                                    | 16        |
| 6.3 Data Interface Connector .....                           | 19        |
| 6.3.1 Ethernet Connector .....                               | 19        |
| 6.4 Data Interface Cables .....                              | 19        |
| 6.5 General Purpose Input/Output (GPIO) .....                | 19        |

|   |           |
|---|-----------|
| 6.6 Data Interface Card .....                     | 19        |
| 6.7 Mounting your Oryx Camera .....               | 20        |
| 6.8 Camera Temperature and Heat Dissipation ..... | 20        |
| 6.9 Lens Mounting .....                           | 21        |
| 6.9.1 Back Flange Distance .....                  | 21        |
| 6.10 Non-Volatile Flash Memory .....              | 22        |
| 6.11 Dust Protection .....                        | 22        |
| 6.12 Infrared Cut-Off Filters .....               | 22        |
| 6.13 Sensor Shutter Type .....                    | 24        |
| 6.13.1 Global Shutter .....                       | 24        |
| <b>7 Input/Output Control .....</b>               | <b>25</b> |
| 7.1 General Purpose Input/Output (GPIO) .....     | 25        |
| 7.2 GPIO Electrical Characteristics .....         | 26        |
| 7.3 Input Timing Characteristics .....            | 28        |
| 7.4 Output Timing Characteristics .....           | 30        |
| <b>8 Troubleshooting .....</b>                    | <b>32</b> |
| 8.1 Support .....                                 | 32        |
| 8.2 Status Indicator LED .....                    | 32        |
| 8.2.1 Network Status LEDs .....                   | 32        |
| <b>Contacting Teledyne FLIR IIS .....</b>         | <b>34</b> |
| <b>Revision History .....</b>                     | <b>34</b> |

# 1 Oryx Camera Installation Guide

Welcome to the Oryx camera. We offer a number of resources to assist you with your camera.

- **Spinnaker SDK**—software development kit that provides GenICam-compliant controls to create applications for the camera. Spinnaker is available for download. Each installation includes API documentation for C, C++, and C#.
- **Release Notes**—information about the current firmware release including feature additions or changes, bug fixes, and known issues.
- **Specifications**—information about the camera model as it performs with the current firmware.
- **Getting Started**—quick start guide for installing the camera and software.
- **Installation Guide**—information about installing the camera and SDK, the physical interface and mechanical properties, troubleshooting and how to get help. This document is available as a PDF for download or as a webpage included in the firmware release package.
- **Technical Reference**—information about the features supported by the camera model with the current firmware, including: image format control, acquisition control, sequencing, binning/decimation, and others. This document is available as a PDF for download or as a webpage included in the firmware release package.
- **Firmware**—programming inserted into the programmable ROM of the camera that can be updated in-field. New firmware packages are available for download and include both the firmware file and documentation.

These resources as well as knowledge base articles and application notes can be found on the webpage for the product.

[Oryx Camera Resources and Support](#)

---

## 2 Handling Precautions and Camera Care

**Warning!** Do not open the camera housing. Doing so voids the Hardware Warranty described in the [Terms and Conditions](#) on our website.

Your Teledyne FLIR IIS machine vision camera is a precisely manufactured device and should be handled with care. Here are some tips on how to care for the device.

- Avoid electrostatic charging.
- When handling the camera unit, avoid touching the lenses. Fingerprints will affect the quality of the image produced by the device.
- To clean the lenses, use a standard camera lens cleaning kit or a clean dry cotton cloth. Do not apply excessive force.
- Avoid excessive shaking, dropping or any kind of mishandling of the device.
- Extended exposure to bright sunlight, rain, dusty environments, etc. may cause problems with the electronics and the optics of the system.

# 3 Oryx Camera Installation

## 3.1 Preparing for Installation

### Will your system support your camera?

Recommended System Configuration:

- **OS, CPU, RAM**—dependent on SDK requirements
- **Ports**—10GBASE-T network adapter
- **Software**—Microsoft Visual Studio to run/compile example code

**Note:** Refer to [10GigE Best Practices: Setting Up a Single-camera System](#) for information on best practices for host system configuration, cabling, and Oryx camera settings.

### Have you visited our website?

A downloads account is required to download software and firmware.

1. Go to the [Teledyne Vision Solutions website](#).
2. Enter your email address and click Continue.
3. Complete the Create an account form and click Continue.
4. You will receive an email with a link to activate your account.
5. Once activated, you can login using your credentials.

The [Oryx camera resources](#) page has many links to help you operate your camera effectively, including:

- Knowledge Base articles
- Spinnaker<sup>®</sup> SDK software, including drivers and Firmware updates and release notes (login required)
- Documentation and dimensional drawings / CAD models

### Do you have all the parts you need?


To install your camera you need the following components:

- Ethernet cable (see [Data Interface Cables](#))
- Interface card (see [Data Interface Card](#))
- GPIO cable (see [General Purpose Input/Output \(GPIO\)](#))
- Lens (see [Lens Mounting](#))
- Tripod adapter (optional) (see [Mounting your Oryx Camera](#))

Teledyne FLIR IIS sells a number of the additional parts required for installation. Visit the [Teledyne FLIR IIS Accessories page](#).

## 3.2 Installing your Interface Card and Software

### 1. Install your Interface Card

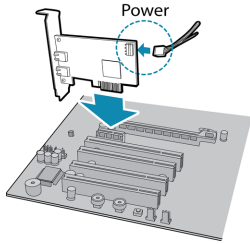

Ensure the card is installed per the manufacturer's instructions.

Connect the internal IDE or SATA power connector on the card to the computer power supply.

Alternatively, use your PC's built-in host controller, if equipped.

Open the Windows Device Manager. Ensure the card is properly installed. Ethernet cards appear under **Network Adapters**. An exclamation point (!) next to the card indicates the driver has not yet been installed.

### 2. Install the Spinnaker® SDK Software

**Note:** For existing users who already have Spinnaker installed, we recommend ensuring you have the latest version for optimal performance of your camera. If you do not need to install Spinnaker, use SpinView to install and enable drivers for your card.

- a. Go to the [Spinnaker SDK Download](#) page. If you are not already logged in, you are prompted to login.
- b. Click the Download Now button.
- c. Select your operating system and version.
- d. After download is complete, open the file to start the Spinnaker setup wizard.
- e. Follow the steps in each setup dialog.

### 3. Optimize the settings of your Ethernet card

- a. In **Start** → **Teledyne Spinnaker SDK** → **SpinView**, right click on the Network Adapter and select Adapter Configuration. The Adapter Config Utility lists your network adapters and allows you to access the following:
 

|                      |                    |                      |
|----------------------|--------------------|----------------------|
| ▪ Adapter IP address | ▪ Receive buffers  | ▪ RSS                |
| ▪ Subnet mask        | ▪ Transmit buffers | ▪ Media optimization |
| ▪ Default gateway    | ▪ Jumbo packets    | ▪ CPU affinity       |



**Note:** See [How to Optimize GigE Network Adapter Settings](#) for more information on configuring for best performance.

## 3.3 Installing Your Oryx

### 1. Attach a Lens

Unscrew the dust cap from the lens holder to install a lens.

### 2. Connect the interface Card and Cable to the Camera

Plug the interface cable into the host controller card and the camera. The cable jack screws can be used for a secure connection.

When the camera is first connected, the operating system automatically installs the camera driver. Camera drivers are available with the Spinnaker SDK installation.

### 3. Plug in the GPIO connector

GPIO is used for power, trigger, serial input output, and strobe.

### 4. Confirm Successful Installation

Run the SpinView application: **Start**→**Teledyne Spinnaker SDK**→**SpinView**

The SpinView application can be used to test the camera's image acquisition capabilities.

### 5. Configure IP Settings if necessary

By default, a dynamic IP address is assigned to the camera according to the DHCP protocol. If DHCP addressing fails, a link-local address is assigned. If necessary, in SpinView change the IP address of the camera to be on the same subnet as the NIC.

Changes to your camera's installation configuration can be made using the SpinView application.

## 3.4 Powering Your Oryx

Power is provided externally through the GPIO interface: 12 - 24 V. The external power supply providing 12-24 Vdc to the camera shall be certified to 60950-1 or 62368-1 with limited power source of less than 100 VA (LPS) having double/reinforced insulation to the AC mains hazardous input voltages of 100-240 Vac.

Power consumption is:

- ORX-10GS-32S4 — 11.8 W (11.3 nominal)
- ORX-10G(S)-51S5 — 12.3 W (11.7 W nominal)
- ORX-10G-71S7 — 13.6 W (13.2 W nominal)
- ORX-10G(S)-89S6 — 12.6 W (12.3 W nominal)
- ORX-10G(S)-123S6 — 13 W (12.8 nominal)
- ORX-10G-245S5 — 13.8 W (13.4 nominal)
- ORX-10G-310S9 — 13.9 W (13.6 nominal)
- 97-02800-00100 — 13 W (12.8 nominal)

The camera does not transmit images for the first 100 ms after power-up. The auto-exposure and auto-white balance algorithms do not run while the camera is powered down. It may therefore take several images to get a satisfactory image.

When the camera is power cycled (power disengaged then re-engaged), the camera reverts to its default factory settings, or if applicable, a saved user set.

# 4 Tools to Control your Oryx Camera

The Oryx camera's features can be accessed using various controls, including:

- Spinnaker SDK including API examples
- SpinView camera evaluation application, included in the Spinnaker SDK installation
- Third-party GenICam applications

## 4.1 Using the Spinnaker<sup>®</sup> SDK

You can monitor or control features of the camera through Spinnaker API examples provided in the Spinnaker SDK, or through the SpinView camera evaluation application. A *Programmer's Guide and API Reference* is included in the installation.

The Spinnaker SDK is available for download from the [Spinnaker page](#).

### 4.1.1 SpinView Camera Evaluation Application

The SpinView application is a generic, easy-to-use streaming image viewer included with the Spinnaker SDK that can be used to test many of the capabilities of your camera. It allows you to view a live video stream from the camera, save individual images, adjust the various attributes, frame rates, features and settings of the camera. It includes tools for updating firmware, managing drivers, IP addressing, and activity logging.

### 4.1.2 Custom Applications Built with the Spinnaker API

The Spinnaker SDK includes a full Application Programming Interface that allows you to create custom applications to control your camera. Included with the SDK are a number of source code examples to help you get started.

Spinnaker API examples are provided for C, C++, C#, and VB.NET languages. These examples are precompiled for your convenience.

## 4.2 Using GenICam Applications

GigE Vision is an interface standard that allows for fast image transfer over Ethernet networks. All cameras supporting GigE Vision interact the same way with software also supporting GigE Vision.

For more information on the standard, visit [visiononline.org](http://visiononline.org).

The standard defines required elements for camera identification, control, and output. It uses GenICam, a programming interface for camera attribute control. GenICam allows camera vendors to define features and attributes in an XML file stored inside the camera. The file is parsed by the host application when the camera is initially discovered. One of the key benefits of GenICam is the ability for camera vendors to introduce new camera-specific features without needing to update the host application.

Each camera attribute, such as exposure time, is controlled by a specific GenICam feature. The camera includes an XML device description file for interfacing with third-party GenICam-compliant APIs.

For more information on GenICam, visit [emva.org](http://emva.org).

### Getting Started with Third-Party Applications Resources

[Getting Started with OpenCV](#)

[Getting Started with MATLAB](#)

[Getting Started with MVTec HALCON](#)

[Getting Started with Cognex VisionPro](#)

[Getting Started with Adaptive Vision](#)

[Getting Started with Matrox Imaging Library](#)

[Getting Started with Matrox Design Assistant](#)

[Getting Started with NI-MAX and LabVIEW](#)

[Getting Started with NI Vision Builder for Automatic Inspection](#)

# 5 Configuring the Oryx Camera Setup

After successful installation of your camera and interface card, you can make changes to the setup. Use the tools described below to change the IP Address, bandwidth, Ethernet settings, or the driver for your interface card.

For information on updating your camera's firmware post installation, see [Oryx Camera Firmware](#).

## 5.1 Configuring the Camera Driver

The driver is installed automatically by the Spinnaker SDK installer for Camera Evaluation or for Application Development if the Drivers checkbox is selected (default). A restart is required.

**Note:** For optimal driver performance, install Spinnaker version 4.0 or later.

Alternatively, you can manually install the driver. The driver files are located in:

C:\Program Files\Teledyne\GigE Vision Interface\x64

To manage and update drivers use the SpinView application:

1. Start SpinView:  
**Start Menu** → **Teledyne Spinnaker SDK** → **SpinView**
2. From the Devices list, select the camera and click the Switch Driver button.



3. Select the driver from the drop-down list.
4. Click Install Driver.

## 5.2 Configuring the IP Address

When a new GigE camera is first powered and initialized, a dynamic IP address is assigned to the camera according to the DHCP protocol. If DHCP addressing fails, a link-local address is assigned. You can configure the IP address using the GenICam Features Transport Layer Control.

Alternatively, SpinView is a tool included with the Spinnaker SDK that allows you to set the internet protocol (IP) configuration for any GigE interface cards or Teledyne FLIR IIS GigE Vision cameras connected to your system. Using SpinView, you can:

- Set the IP address for the current connection.
- Program a persistent IP address for the camera.

- Configure the default IP addressing behavior of the camera on startup using a persistent IP, DHCP or LLA.
- Enable Jumbo Frames on the GigE NIC.

Both your camera and host adapter must have an IP address on the same subnet. This can be assigned in three ways:

- **Persistent**—The camera has a fixed IP address that does not change. Generally the address is within a closed network range of 192.168.X.X.
- **Dynamic (DHCP)**—The camera is set to automatically obtain an IP address. This means that the IP address may change (within a range) every time the camera or computer is restarted. It may take up to one minute for the IP address to resolve and the camera to enumerate.
- **Default (LLA)**—The camera uses an IP address from the link-local address block 169.254.x.x.

The camera assigns its current IP address in the following sequence:

1. **Persistent**—Uses the defined IP address. If not available, then;
2. **DHCP**—Attempts to find a dynamic IP address. If not available, then;
3. **LLA**—Uses an LLA IP address.

SpinView can automatically force an IP address refresh. This detects the IP address of the Network Interface card and automatically sets the camera's IP address relative to the card.

To open SpinView:

**Start**→**Teledyne Spinnaker SDK**→**SpinView**

## 5.3 Allocating Bandwidth

The User Datagram Protocol (UDP) used by the GigE Vision standard provides no guaranteed transmission or fixed timing mechanism. Therefore, bandwidth must be managed by the Device Throughput Limit, based on desired resolution and frame rate.

### 5.3.1 Determining Bandwidth Requirements

The maximum bandwidth available is 1250 MB/s. This includes image data, control data and image resends, which occur when frames are being dropped. Each image and each packet has a certain amount of overhead that will use some bandwidth. Therefore, when calculating your bandwidth requirements, you should not attempt to use the full maximum of 1250 MB/s.

To calculate your bandwidth requirements:

Determine your required resolution, frame rate, and pixel format (bytes per pixel)

$$(\text{Height} \times \text{Width} \times \text{Frame Rate} \times \text{Bytes per Pixel}) / 1000000 = \text{Bandwidth in MB/s}$$

For example, for an image that is 4096 × 2160, 93 FPS, Mono8:

$$4096 \text{ (H)} \times 2160 \text{ (W)} \times 93 \text{ (FPS)} \times 1 \text{ (BPP)} = \sim 823 \text{ MB/s}$$

Once you have calculated your required bandwidth, you can allocate an amount to each camera by adjusting the Device Throughput Limit. Allocating a specific amount to each camera helps to avoid dropped packets due to a data burst. You

would do this in a set up with multiple cameras, or in a situation where the system bandwidth might be limited or shared due to hardware architecture.

### Bandwidth Requirements for Multiple Cameras

Multiple cameras can be set up in two ways: 1) Each camera is connected directly to a single Ethernet port; or, 2) multiple cameras are connected to a single port through an Ethernet switch.

If using the first method, each camera has the full bandwidth allocation available to it. If using the second method, the combination of all cameras on a switch cannot exceed the available bandwidth.

### Related Knowledge Base Articles

[Setting Up Multiple GigE Cameras](#)

## 5.4 Configuring Other Ethernet Settings

### 5.4.1 Stream Channel Destination Address

The stream channel destination address (SCDA) register is used to specify the streaming destination IP address. The default SCDA is the IP address of the network or computer to which the camera is connected. It can be set within a range so that the camera sends data as a multicast. As long as switches in the path between the sender and receivers support and are configured for multicasting, multiple receivers can listen to the data stream from the camera.

Multicast addresses are between 224.0.0.0 and 239.255.255.255.

**Note:** For more information on multicast address assignments, see <http://tools.ietf.org/html/rfc3171>

To control SCDA use:

- GenICam—GevSCDA in the Transport Layer Control

### 5.4.2 Heartbeat

The heartbeat is a mandatory GigE Vision feature to monitor the connection between an application and the camera. The application must continually reset the heartbeat timer, or the camera assumes an error has occurred and shuts down the connection. This is to allow a host that has stopped working to be able to take control of the camera once it is restarted or to allow a different host to take control of the camera.

The Spinnaker API manages the heartbeat communication of the camera at a low level so you do not need to continuously communicate with the camera after enumeration. However, the following two features are user controllable: Heartbeat Timeout and Heartbeat Disable. You may consider using these settings when you never want to lose connection with the camera such as a scenario where Ethernet communication may be removed from time to time. Also, the heartbeat timeout could be increased in situations where there is network congestion on a switch, preventing packets from being received on the host or device for a period of time. Generally, the default settings provide a stable method for connecting to the camera.

### **Heartbeat Timeout**

Heartbeat timeout is the time, in milliseconds, that the camera waits before closing the connection. Heartbeat timeout can be set between 500 ms and 10 seconds. The default setting is 3000 ms (3 seconds). If there is no communication between the camera and the application for longer than the timeout value, the connection is shut down.

To control Heartbeat Timeout use:

- GenICam—Under Transport Layer Control, `GevHeartbeatTimeout`.
- Spinnaker API—The Spinnaker SDK supports configuring heartbeat timeout.

### **Heartbeat Disable**

The heartbeat is enabled by default.

To disable Heartbeat use:

- GenICam—Under Transport Layer Control `GevGVCPHeartbeatDisable`.
- Spinnaker API—The Spinnaker SDK supports disabling heartbeat.



## 5.5 Oryx Camera Firmware

Firmware is programming that is inserted into the programmable read-only memory (programmable ROM) of most Teledyne FLIR IIS cameras. Firmware is created and tested like software. When ready, it can be distributed like other software and installed in the programmable read-only memory by the user.

The latest firmware versions often include significant bug fixes and feature enhancements. To determine the changes made in a specific firmware version, consult the Release Notes.

Firmware is identified by a version number, a build date, and a description.

### 5.5.1 Determining Firmware Version

To determine the firmware version number of your camera:

- Query the GenICam Device Control feature DeviceFirmwareVersion.
- or
- In SpinView, click the Information tab to view camera information including Device Firmware Version.

### 5.5.2 Upgrading Firmware

Firmware can be upgraded or downgraded to later or earlier versions using SpinView, part of the Spinnaker SDK.

Before upgrading firmware:

- Install the **Spinnaker SDK**, available from the [Spinnaker page](#).
- Download the firmware from the website:
  - Go to the [Software & Firmware Downloads](#) page.
  - Click the + symbol to expand the Cameras tree to find your model.
 

**PRODUCTS:**

Cameras
  - Click Download next to the file.

To upgrade the firmware:

1. **Start**→**Teledyne Spinnaker SDK**→**SpinView**
2. From the Device list, right click the camera and select Update Device Firmware.  
If you get a Device is Active warning, close the Display pane or click the Disconnect button and right click the camera again.
3. Browse to select the firmware file and click Open.
4. Click Yes to continue.

**Warning!** Do not disconnect the camera during the firmware update process.

### Related Knowledge Base Articles


[Teledyne FLIR machine vision software and firmware version numbering systems](#)

[Determining my camera's firmware version](#)

[Should I upgrade my camera firmware or software?](#)

# 6 Oryx Camera Physical Interface

## 6.1 Oryx Physical Description

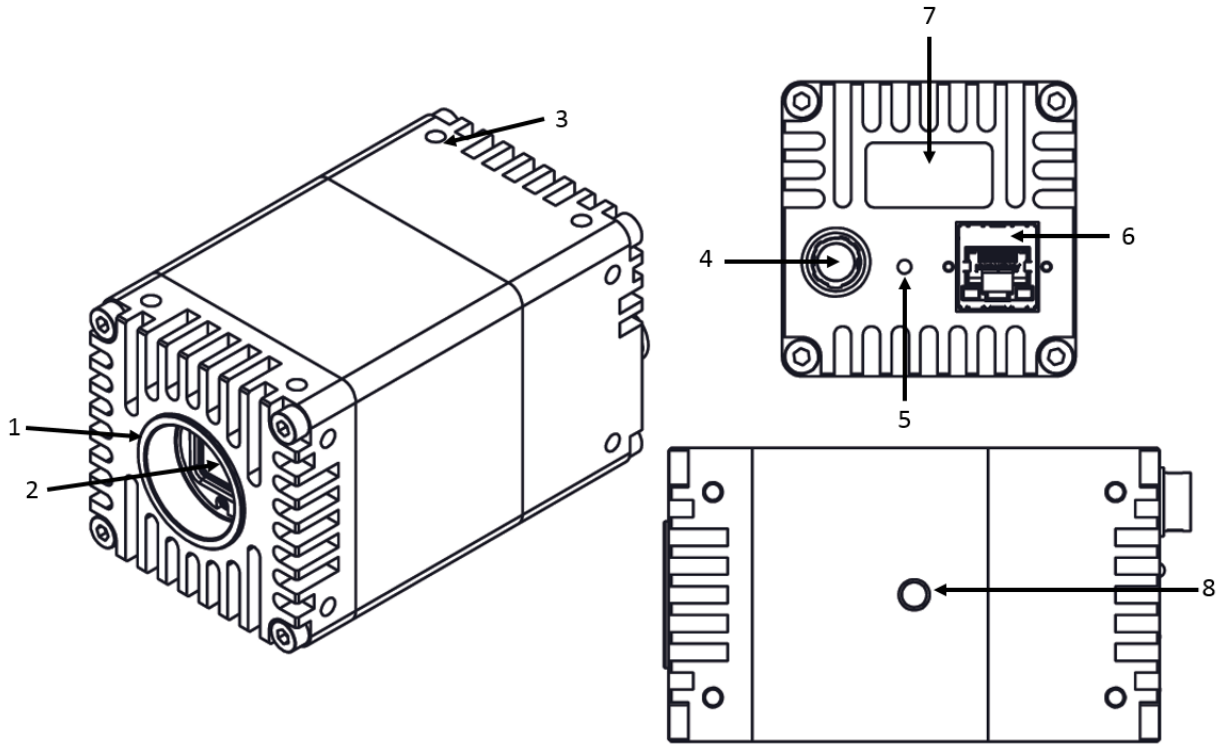

**1. Lens holder**

See [Lens Mounting](#)

**2. Glass/IR filter system**

See [Dust Protection](#) and [Infrared Cut-Off Filters](#)

**3. M4.OXO.7 mounting holes (x16)**

See [Mounting your Oryx Camera](#)

**4. General purpose I/O connector**

See [General Purpose Input/Output \(GPIO\)](#)

**5. Status LED**

See [Status Indicator LED](#)

**6. Interface connector**

See [Data Interface Connector](#)

**7. Camera label**

Contains camera information such as model name, serial number and required compliance.


**8. 1/4-20 mounting hole (standard and large case only)**

See [Mounting your Oryx Camera](#)

## 6.2 Oryx Dimensions

Download 3D CAD Models / Drawings:


[ORX CAD Models](#)

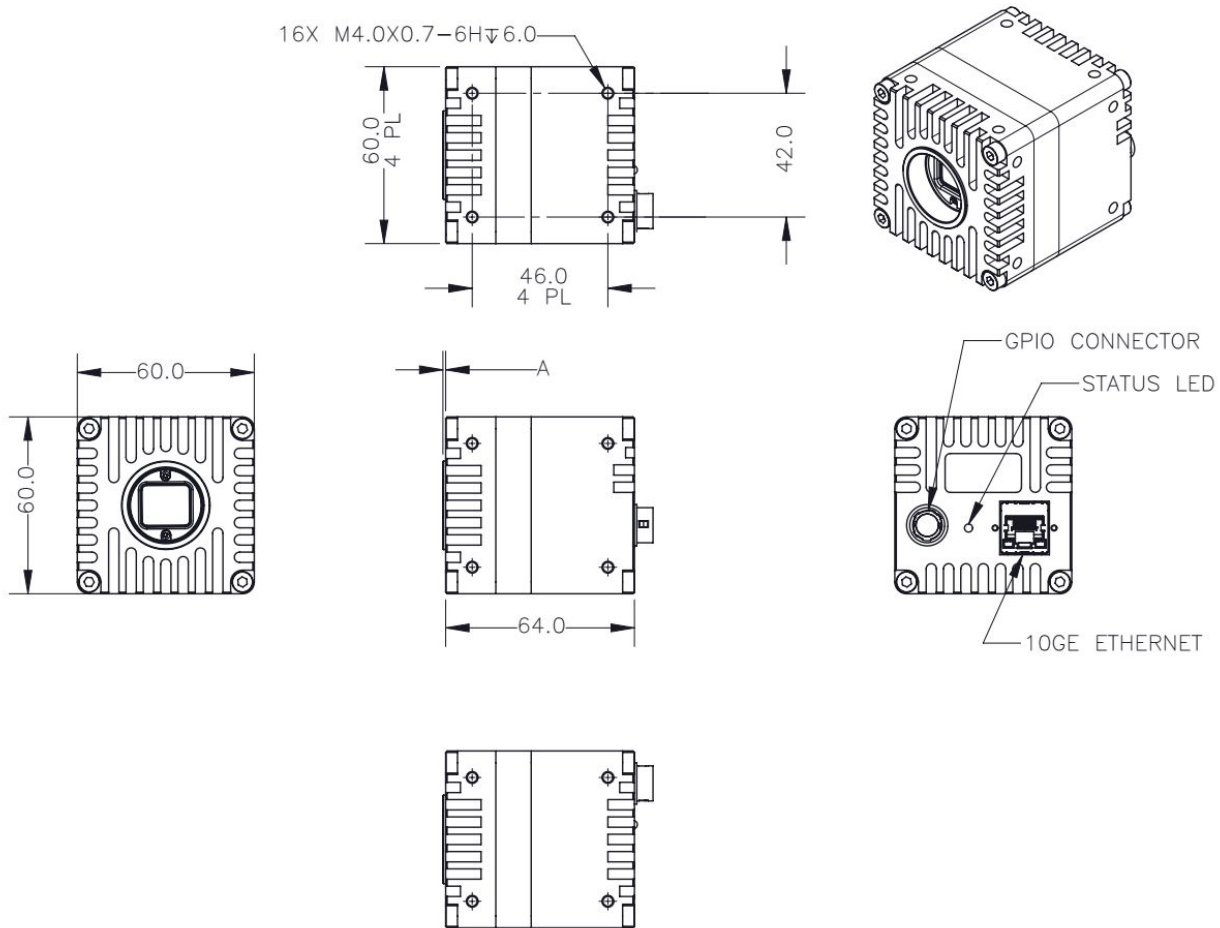

Oryx Dimensional Drawing—Small Format

| Small Case Models | Barrel Length "A"<br>(+0.1/-0.3) |
|-------------------|----------------------------------|
| ORX-10GS-32S4     | 0.9                              |
| ORX-10GS-51S5     | 0.9                              |
| ORX-10GS-89S6     | 0.9                              |
| ORX-10GS-123S6    | 0.9                              |


Note: the small format does not have a 1/4-20 mounting hole

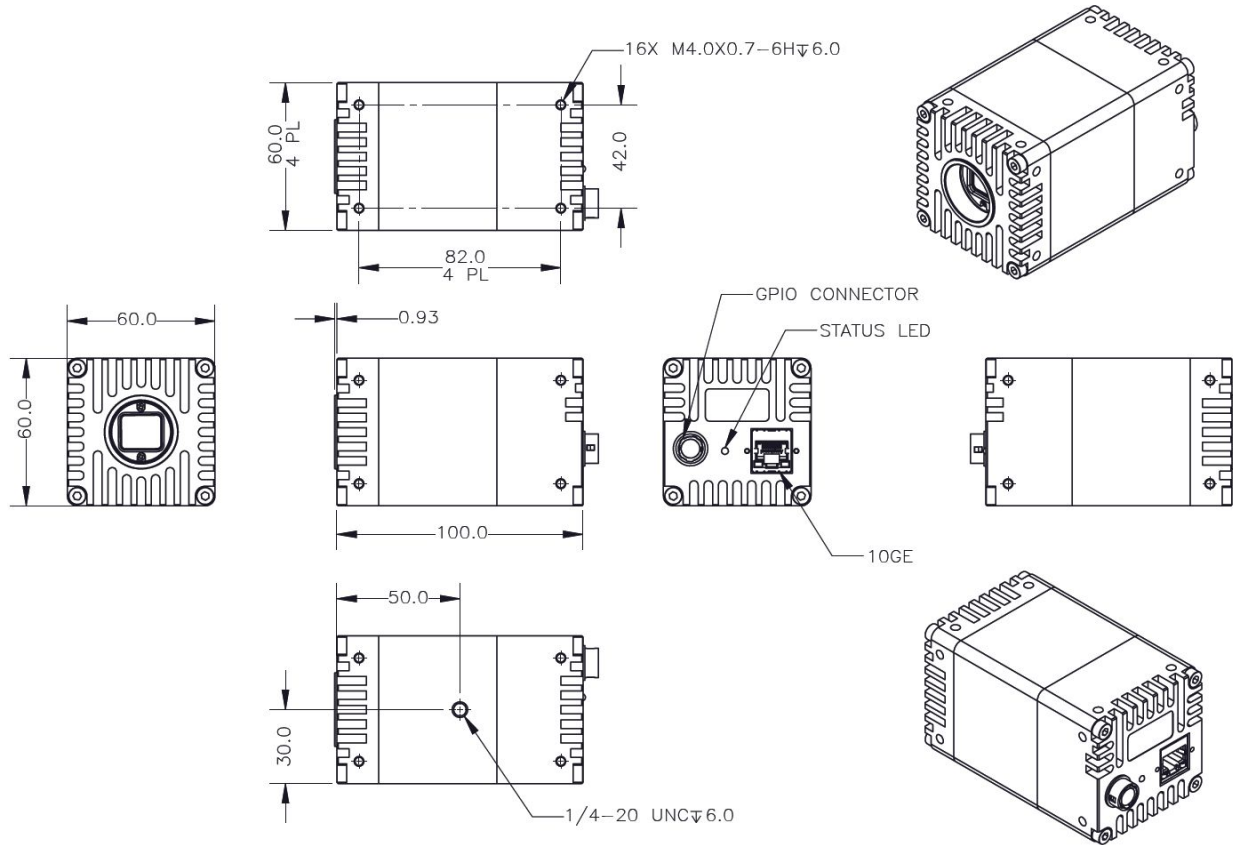

**Oryx Dimensional Drawing—Standard Format**

**Standard Case Models**

|               |
|---------------|
| ORX-10G-51S5  |
| ORX-10G-71S7  |
| ORX-10G-89S6  |
| ORX-10G-123S6 |

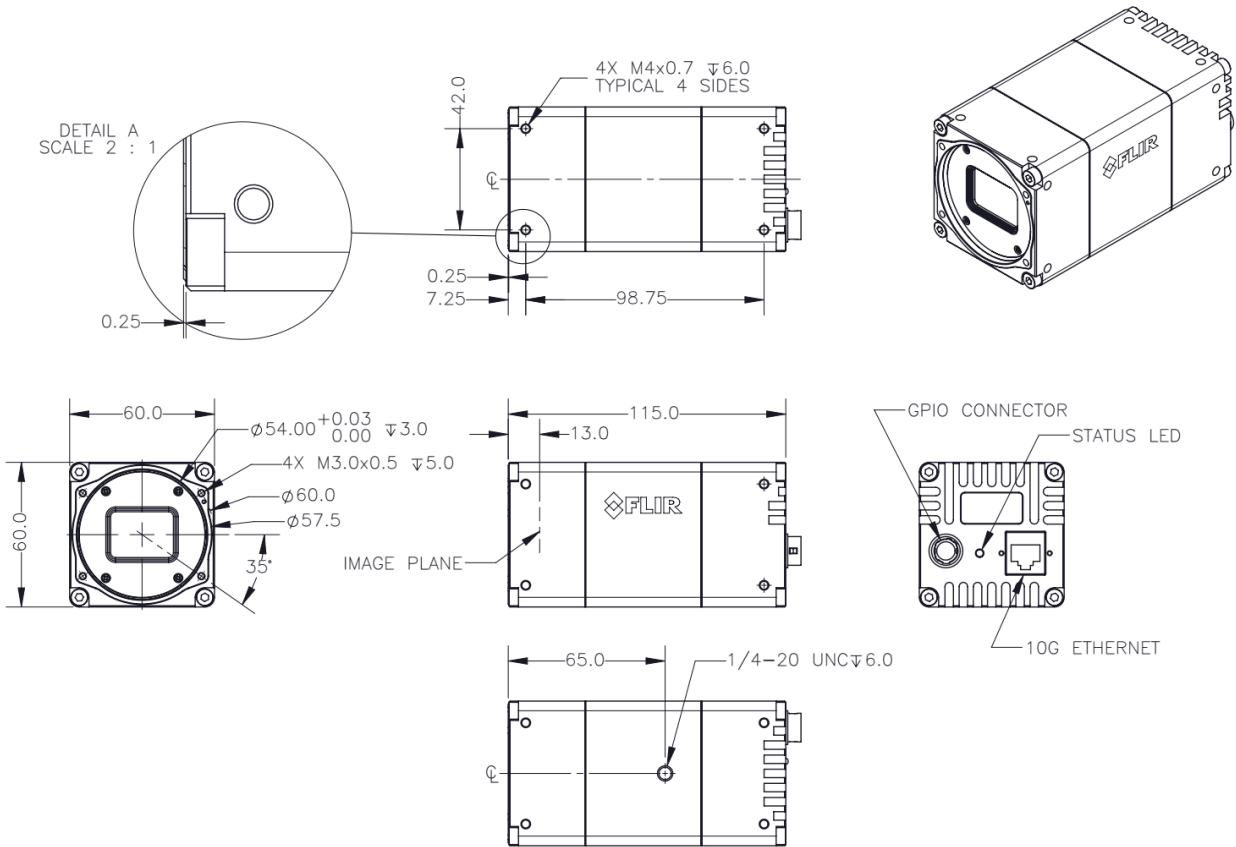

**Oryx Dimensional Drawing—Large Format**

**Large Case Models**

|               |
|---------------|
| ORX-10G-245S8 |
| ORX-10G-310S9 |

## 6.3 Data Interface Connector

### 6.3.1 Ethernet Connector

The 8-pin RJ-45 Ethernet jack is equipped with two (2) M2 screwholes for secure connection. Pin assignments conform to the Ethernet standard.

## 6.4 Data Interface Cables

To purchase a recommended cable from Teledyne FLIR IIS, visit the [Accessories→Cables](#) page.

Category 5e cables up to 40 meters in length can be used with 10GigE. For cable lengths greater than 40 meters, Category 6a cables should be used.

**Note:** For optimal ESD protection, we recommend using a shielded Ethernet cable or connecting the camera housing to chassis ground (earth).

## 6.5 General Purpose Input/Output (GPIO)

The camera has an 12-pin GPIO connector on the back of the case. The connector is a Hirose HR10 (Mfg P/N: HR10A-10R-12SB). The mating connector is a Hirose HR10A (Mfg P/N: HR10A-10P-12P).

The custom model has an 8-pin GPIO connector on the back of the case.

See [Input/Output Control](#) for details on pin assignments and electrical characteristics.

## 6.6 Data Interface Card

The camera must connect to an interface card. This is sometimes called a host adapter, a bus controller, or a network interface card (NIC).

**Note:** For optimal video streaming and camera control performance, we recommend an Intel Pro chipset on a PCIe interface.

A 10G BASE-T NIC is recommended for streaming images at 10GigE speed on the Ethernet network between the camera and host system. If using a 1G, 5G or 2.5G NIC, the Oryx camera only streams at 1GigE speed.

See [How to Optimize GigE Network Adapter Settings](#) for more information on configuring for best performance.

To purchase a compatible card from Teledyne FLIR IIS, visit the [Accessories→Host Adapter Cards](#) page.

## 6.7 Mounting your Oryx Camera

### Using the Case

The case is equipped with the following mounting holes:

- Four (4) M4.0 x 0.7 mounting holes on each side of the case
- One (1) 1/4-20 UNC mounting hole on the bottom of the case (standard and large case only)

**Note:** The 97-02800-00100 model is intended to be mounted to a fixed customer-designed bracket inside a camera array no more than 2 meters high. Using the model outside of this design is not recommended.

### Using the ACC-01-0018 Mounting Bracket (small case only)

The tripod mounting bracket is equipped with four (4) M2 mounting holes.

## 6.8 Camera Temperature and Heat Dissipation

You must provide sufficient heat dissipation to control the internal operating temperature of the camera.

The camera is equipped with an on-board temperature sensor. It allows you to obtain the temperature of the camera board-level components. The sensor measures the ambient temperature within the case.

To access temperature information query the GenICam Device Control feature DeviceTemperature.

*As a result of packing the camera electronics into a small space, the camera can become hot when running. This is expected behavior and will not damage the camera electronics.*



**Warning!** To avoid possible burns do not touch the camera while in operation. Wait at least 15 minutes after powering off before touching.

To reduce heat, use a cooling fan to set up a positive air flow around the camera, taking into consideration the following precautions:

- Mount the camera on a heat sink, such as a camera mounting bracket, made out of a heat-conductive material like aluminum.
- Make sure the flow of heat from the camera to the bracket is not blocked by a non-conductive material like plastic.
- Make sure the camera has enough open space around it to facilitate the free flow of air.



## 6.9 Lens Mounting

Lenses are not included with cameras. Teledyne FLIR IIS sells a number of lenses compatible with our cameras from our [Accessories → Lenses page](#). There is also a [Lens Calculator](#) to help choose an appropriate lens.

Correct focus cannot be achieved using a CS-mount lens on a C-mount camera.

### Related Knowledge Base Articles

[Selecting a lens for your camera](#)

### 6.9.1 Back Flange Distance

The Back Flange Distance (BFD) is offset due to the presence of both a 1 mm infrared cutoff (IRC) filter (color models only) and a 0.5 mm sensor package window. These two pieces of glass fit between the lens and the sensor image plane. The IRC filter is installed on color cameras. The sensor package window is installed by the sensor manufacturer. Both components cause refraction, which requires some offset in flange back distance to correct.

For more information about the IRC filter, see [Infrared Cut-Off Filters](#).

## 6.10 Non-Volatile Flash Memory

The Oryx camera has 4 MB of non-volatile flash memory for users to store data.

### Related Knowledge Base Articles

[Storing data in on-camera flash memory](#)

## 6.11 Dust Protection

The camera housing is designed to prevent dust from falling directly onto the sensor's protective glass surface. In color models, this is achieved by placing an IR cut-off filter that sits above the surface of the sensor's glass. A removable plastic retainer keeps this glass/filter system in place. By increasing the distance between the imaging surface and the location of the potential dust particles, the likelihood of interference from the dust (assuming non-collimated light) and the possibility of damage to the sensor during cleaning is reduced.

**Warning!** Cameras are sealed when they are shipped. To avoid contamination, seals should not be broken until cameras are ready for assembly on site.

**Warning!** Use caution when removing the filter. Damage to any component of the optical path voids the Hardware Warranty. Removing the protective glass or filter alters the optical path of the camera, and may result in problems obtaining proper focus with your lens.


### Related Knowledge Base Articles

[Removing the IR filter from a color camera](#)

[Selecting a lens for your camera](#)

## 6.12 Infrared Cut-Off Filters

Color camera cased models are equipped with an additional infrared (IR) cut-off filter. This filter can reduce sensitivity in the near infrared spectrum and help prevent smearing. The properties of this filter are illustrated in the results below.

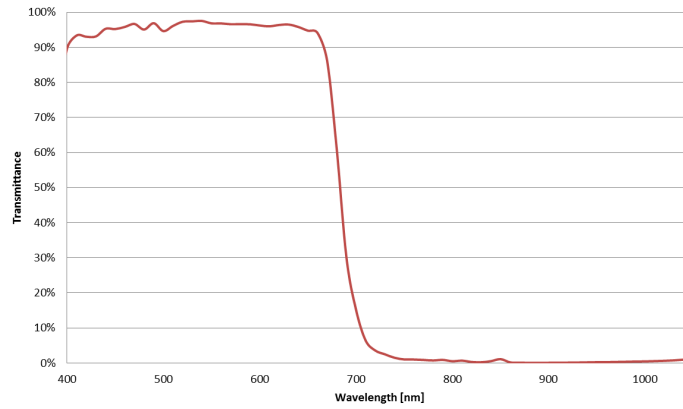

IR filter transmittance graph

| Transmission | Wavelength       |
|--------------|------------------|
| T=50%        | 680 nm ±10 nm    |
| T>80%        | 400 nm - 420 nm  |
| T>85%        | 420 nm - 650 nm  |
| T average 1% | 750 nm - 1100 nm |
| T<3%         | 750 nm - 1100 nm |

The following are the properties of the IR filter glass:

|            | Small and Standard Size Models | Large Models (ORX-10G-245S8 / ORX-10G-310S9) |
|------------|--------------------------------|--|
| Type       | Anti-reflective                |  |
| Material   | Schott B270                    |  |
| Dimensions | 15.5 ±0.08 x 18 ±0.08 mm       | 31.5 ±0.08 x 24.5 ±0.08 mm                   |
| Thickness  | 1 ±0.07 mm                     |  |


For more information, see [Dust Protection](#).

**Warning!** Use caution when removing the IR filter. Damage to any component of the optical path voids the Hardware Warranty. Removing the IR filter alters the optical path of the camera, and may result in problems obtaining proper focus with your lens.

## 6.13 Sensor Shutter Type

### 6.13.1 Global Shutter

For cameras with a global shutter sensor, for each frame all of the lines start and stop exposure at the same time. The exposure time for each line is the same. Following exposure, data readout begins. The readout time for each line is the same but the start and end times are staggered. Readout time for a line is equal to  $1/\text{Horizontal Line Frequency}$ .

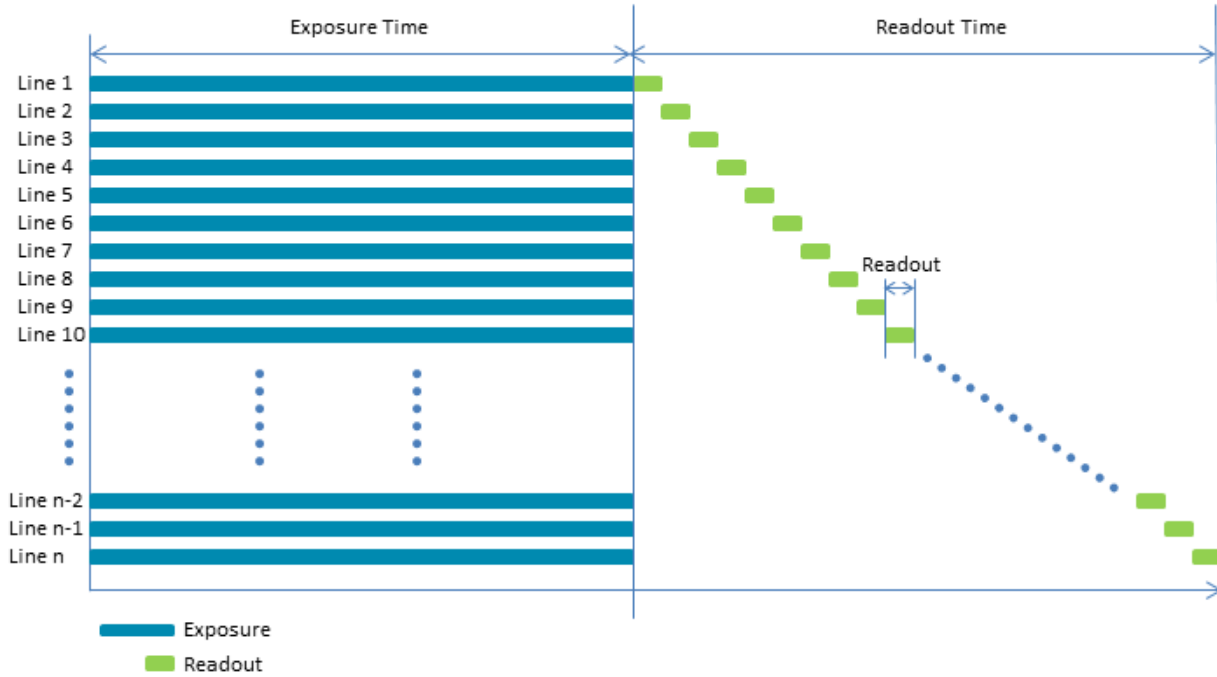

Some advantages of global shutter are more uniform brightness and minimal motion blur.


# 7 Input/Output Control

## 7.1 General Purpose Input/Output (GPIO)

The camera has an 12-pin GPIO connector on the back of the case. The connector is a Hirose HR10 (Mfg P/N: HR10A-10R-12SB). The mating connector is a Hirose HR10A (Mfg P/N: HR10A-10P-12P).

The custom model has an 8-pin GPIO connector on the back of the case.

Small, Standard, and Large Case Models

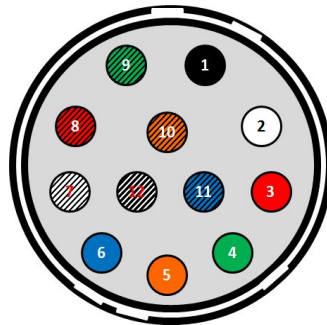

| Color                     | Pin | Line   | Function      | Description  |
|---------------------------|-----|--------|---------------|--|
| Black                     | 1   | N/A    | GND           | DC camera power ground                                       |
| White                     | 2   | N/A    | POWER         | DC camera power  |
| Red                       | 3   | Line 1 | GPIO_OPT_OUT1 | Opto-isolated output (GPO1)                                  |
| Green                     | 4   | Line 4 | GPIO_OPT_OUT2 | Opto-isolated output (GPO2)                                  |
| Orange                    | 5   | Line 0 | GPIO_OPT_IN1  | Opto-isolated input (GPI1)                                   |
| Blue                      | 6   | Line 3 | GPIO_OPT_IN2  | Opto-isolated input (GPI2)                                   |
| White with black stripes  | 7   | Line 2 | GPIO_TTL_IO3  | TTL input/output 3*  |
| Red with black stripes    | 8   | Line 5 | GPIO_TTL_IO4  | TTL input/output 4*  |
| Green with black stripes  | 9   | N/A    | GND           | DC camera power ground                                       |
| Orange with black stripes | 10  | N/A    | POWER         | DC camera power  |
| Blue with black stripes   | 11  | Line 6 | 3.3 V OUTPUT  | +3.3 V output, current 120 mA (nominal) - firmware enabled   |
| Black with white stripes  | 12  | N/A    | OPTO_GND      | Ground for opto-isolated I/O, not connected to camera ground |

\*When configured as output line format is open drain, not TTL. Users should attach their own external pull-up resistor.

## 7.2 GPIO Electrical Characteristics

Both the opto-isolated input and output have over current protection.

The output is open collector and thus requires a pull-up resistor to operate. The rise time and bias current will be determined by the resistor value chosen. If the camera is generating an output signal that approaches the rise time plus the fall time of the opto-isolated circuit, care must be taken to optimize the pull-up resistor chosen to minimize the rise time while still remaining within the current limits of the output circuit.


The opto-isolated specifications listed below are applicable when power to the camera is provided through the interface and not through the GPIO.


**Warning!** To avoid damage, connect the OPTO\_GND pin first before applying voltage to the GPIO line.

**Warning!** Prolonged use of the camera outside of the Operating Range described below may lead to unexpected behavior and should be avoided.


### Operating Range

| Description                       | Minimum | Maximum |
|-----------------------------------|---------|---------|
| Non-opto-isolated Voltage         | 0 V     | 24 V    |
| Opto-isolated Input Voltage       | 0 V     | 30 V    |
| Opto-isolated Output Voltage      | 0 V     | 24 V    |
| Non-opto-isolated Sinking Current |         | 25 mA   |
| Opto-isolated Output Current      |         | 25 mA   |
| 3.3 V Output Current              |         | 200 mA  |

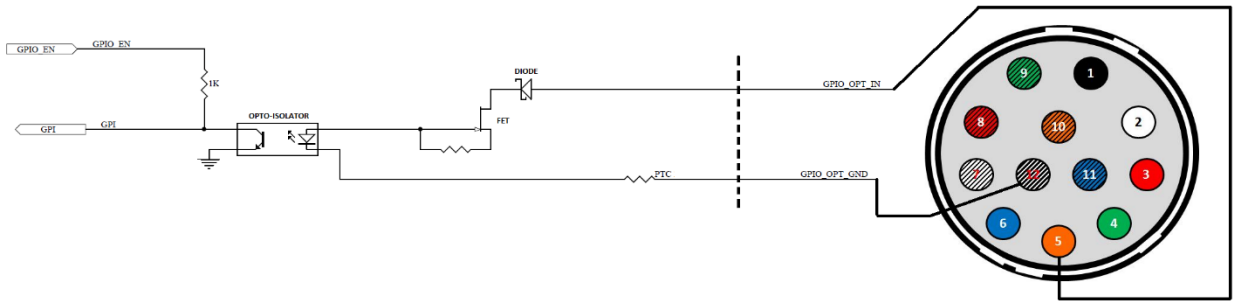

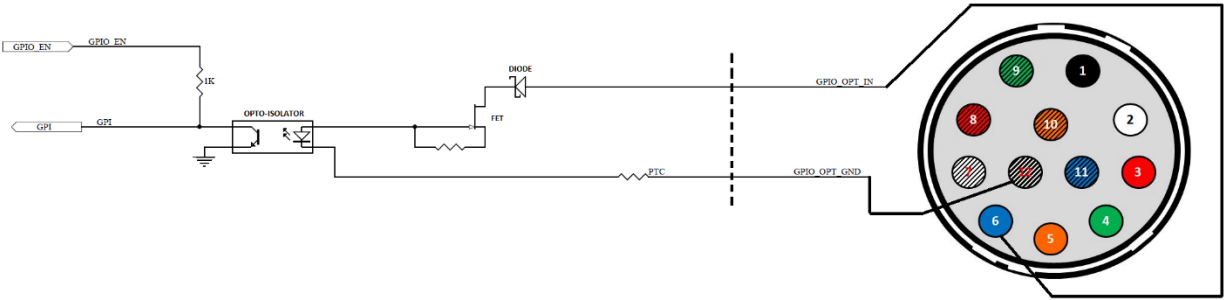

**Opto-isolated input circuit**

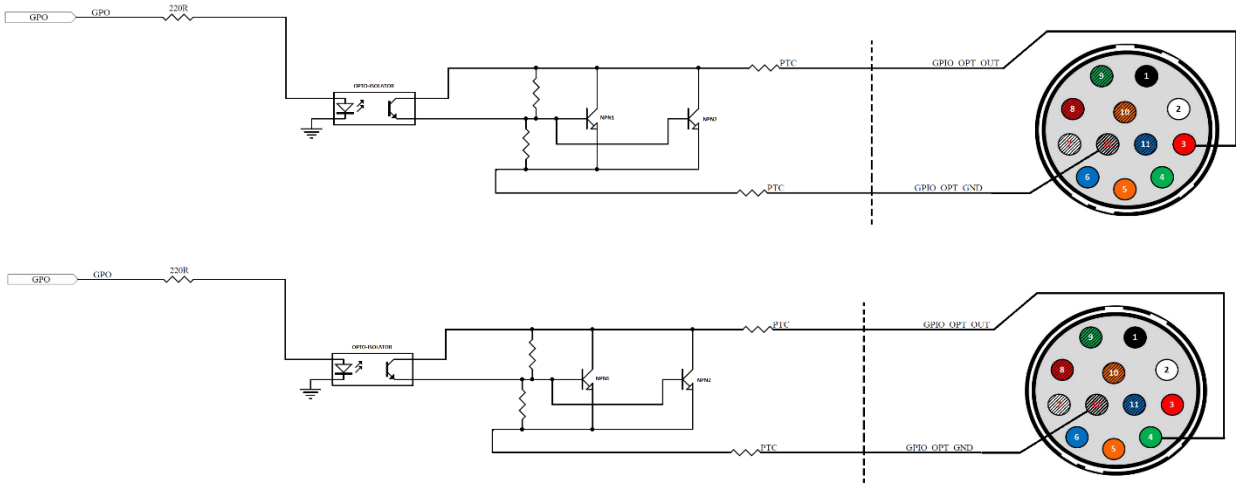


**Opto-isolated output circuit**

**External Voltage Resistor Combinations at 90 FPS (Non-isolated input/output)**


| External Voltage | External Resistor | Output Current |
|------------------|-------------------|----------------|
| 3.3 V            | 1.0 Ω             | 3.1 mA         |
| 5.0 V            | 1.0 kΩ            | 4.8 mA         |
| 12 V             | 2.0 kΩ            | 6.0 mA         |
| 12 V             | 2.4 kΩ            | 5.0 mA         |
| 24 V             | 4.7 kΩ            | 5.2 mA         |

Values are for reference only

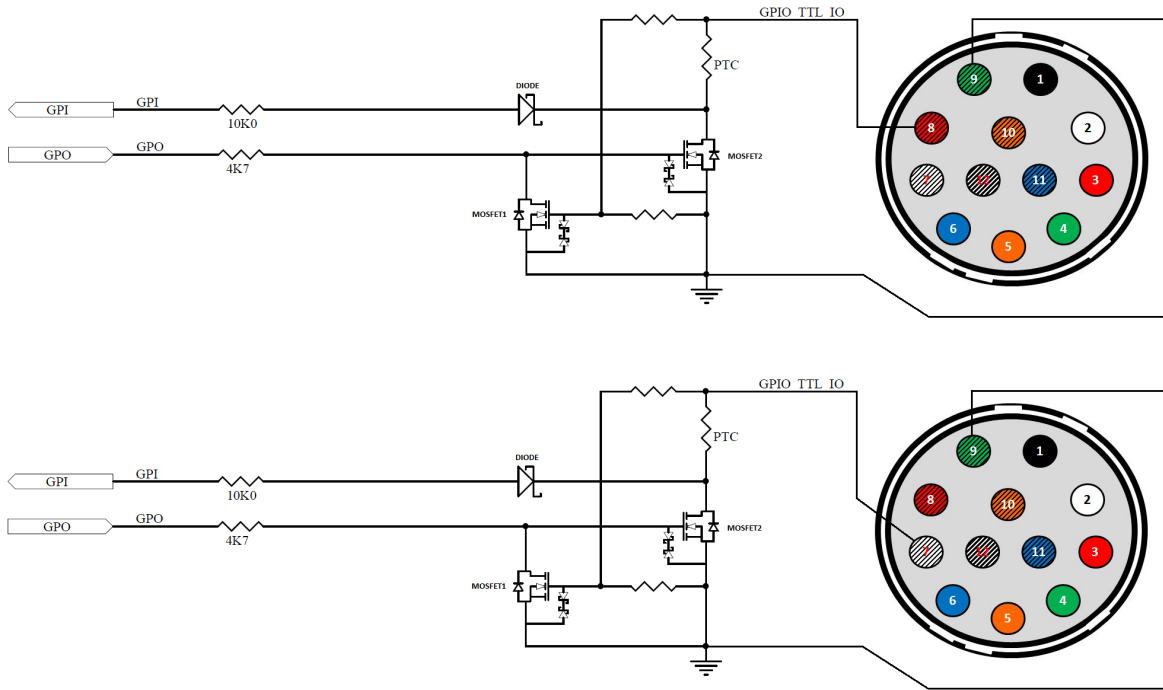

Input/Output circuit

### 7.3 Input Timing Characteristics

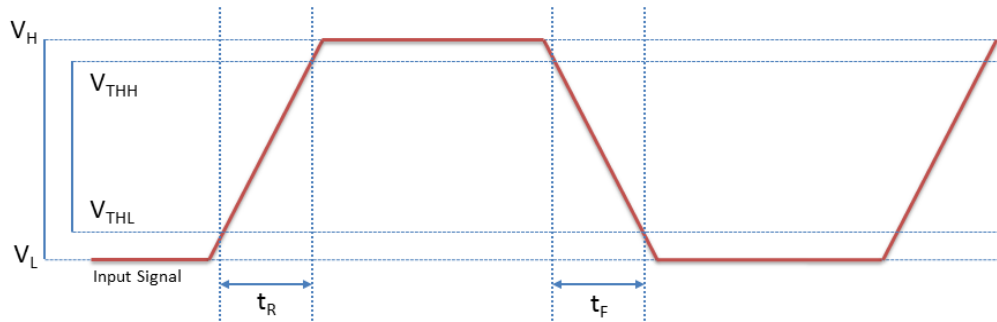


Input Timing Characteristics

Non-isolated Input Performance (measured at Vcc = 5 V, Rext = 1 kΩ)

| Parameter                    | Symbol    | Non-isolated |
|------------------------------|-----------|--------------|
| Input Low Voltage            | $V_L$     | 0.85 V       |
| Input High Voltage           | $V_H$     | 4.94 V       |
| Input Threshold High Voltage | $V_{THH}$ | 4.54 V       |
| Input Threshold Low Voltage  | $V_{THL}$ | 1.26 V       |




| Parameter       | Symbol | Non-isolated |
|-----------------|--------|--------------|
| Cycle Rise Time | $t_R$  | 10.8 $\mu$ s |
| Cycle Fall Time | $t_F$  | 2 $\mu$ s    |
| Current         |        | 4.1 mA       |

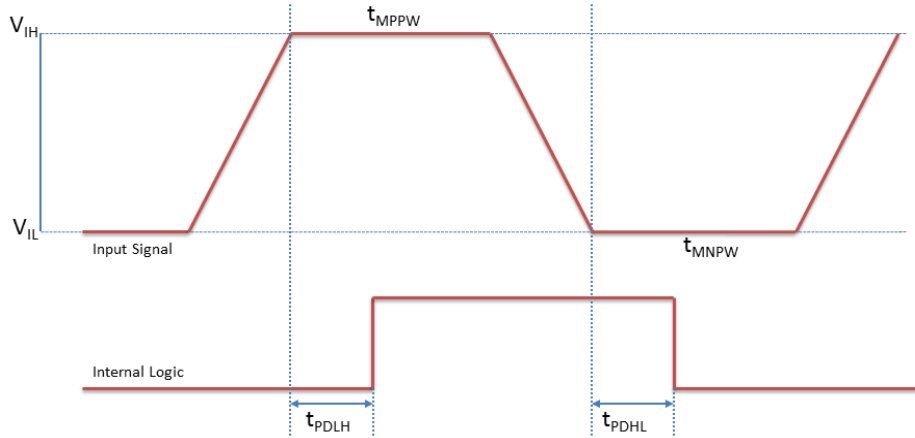

Opto-isolated Input Performance (Vcc = varying pk-pk)

| Parameter                     | Symbol     | Opto-isolated<br>5 V, 1 kΩ | Opto-isolated<br>3 V, 200 Ω |
|-------------------------------|------------|----------------------------|-----------------------------|
| Input Low Voltage             | $V_{IL}$   | $\leq 1.96$ V              | $\leq 2$ V                  |
| Input High Voltage            | $V_{IH}$   | $\geq 2$ V                 | $\geq 2.05$ V               |
| Propagation Delay Low to High | $t_{PDLH}$ | 20.9 $\mu$ s               | 19.7 $\mu$ s                |
| Propagation Delay High to Low | $t_{PDHL}$ | 5.6 $\mu$ s                | 16.7 $\mu$ s                |
| Typical Positive Pulse Width  | $t_{MPPW}$ | 12 $\mu$ s                 | 12 $\mu$ s                  |
| Typical Negative Pulse Width  | $t_{MNPW}$ | 6 $\mu$ s                  | 6 $\mu$ s                   |

## 7.4 Output Timing Characteristics

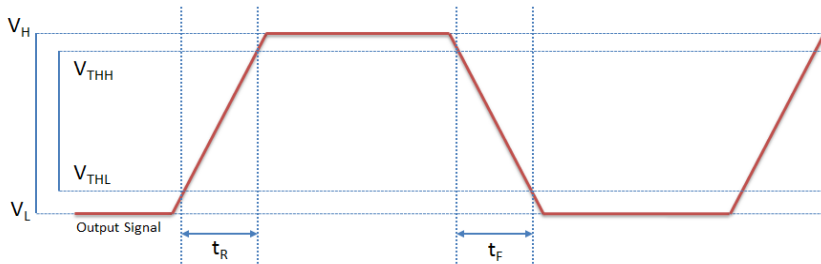

Output Timing Characteristics

Non-isolated Output Performance (measured at Vcc = 5 V, Rext = 1 kΩ)

| Parameter                     | Symbol    | Non-isolated |
|-------------------------------|-----------|--------------|
| Output Low Voltage            | $V_L$     | 0.23 V       |
| Output High Voltage           | $V_H$     | 4.95 V       |
| Output Threshold High Voltage | $V_{THH}$ | 4.48 V       |
| Output Threshold Low Voltage  | $V_{THL}$ | 0.7 V        |

| Parameter       | Symbol | Non-isolated |
|-----------------|--------|--------------|
| Cycle Rise Time | $t_R$  | 2.6 $\mu$ s  |
| Cycle Fall Time | $t_F$  | 0.23 $\mu$ s |
| Opto Current    |        | 4.8 mA       |

**Opto-isolated Output Performance (measured at Vcc = 3.3 V, Rext = 200  $\Omega$ )**

| Parameter                         | Symbol    | Opto-isolated |              |
|-----------------------------------|-----------|---------------|--------------|
|                                   |           | Load          | No Load      |
| Output Low Voltage                | $V_L$     | 1.44 V        | 1.47 V       |
| Output High Voltage               | $V_H$     | 2.64 V        | 3.25 V       |
| Output Threshold High Voltage     | $V_{THH}$ | 2.52 V        | 3.07 V       |
| Output Threshold Low Voltage      | $V_{THL}$ | 1.56 V        | 1.65 V       |
| Cycle Rise Time                   | $t_R$     | 5.2 $\mu$ s   | 24 $\mu$ s   |
| Cycle Fall Time                   | $t_F$     | 28 $\mu$ s    | 4.6 $\mu$ s  |
| Opto Current                      |           | 3.08 mA       | 8.4 mA       |
| Opto Isolator Delay (High to Low) |           | 5.3 $\mu$ s   | 5.5 $\mu$ s  |
| Opto Isolator Delay (Low to High) |           | 12.7 $\mu$ s  | 15.2 $\mu$ s |

**Opto-isolated Output Performance (measured at Vcc = 5 V, Rext = 1 k $\Omega$ )**

| Parameter                         | Symbol    | Opto-isolated |              |
|-----------------------------------|-----------|---------------|--------------|
|                                   |           | Load          | No Load      |
| Output Low Voltage                | $V_L$     | 0.86 V        | 0.92 V       |
| Output High Voltage               | $V_H$     | 2.29 V        | 5 V          |
| Output Threshold High Voltage     | $V_{THH}$ | 2.15 V        | 4.59 V       |
| Output Threshold Low Voltage      | $V_{THL}$ | 1.00 V        | 1.33 V       |
| Cycle Rise Time                   | $t_R$     | 12 $\mu$ s    | 10.3 $\mu$ s |
| Cycle Fall Time                   | $t_F$     | 19.6 $\mu$ s  | 17.2 $\mu$ s |
| Opto Current                      |           | 2.68 mA       | 3.9 mA       |
| Opto Isolator Delay (High to Low) |           | 3.9 $\mu$ s   | 4.1 $\mu$ s  |
| Opto Isolator Delay (Low to High) |           | 26.8 $\mu$ s  | 25.1 $\mu$ s |

# 8 Troubleshooting

## 8.1 Support

Teledyne FLIR IIS endeavors to provide the highest level of technical support possible to you. Most support resources can be accessed through your product's Support page.

[Oryx Camera Resources and Support](#)

### Contacting Technical Support

Before contacting Technical Support, have you:

1. Read the product documentation?
2. Searched the Product Support page?
3. Downloaded and installed the latest version of software and/or firmware?
4. Checked out our [support community forum](#)?
5. Looked at our [GitHub Spinnaker Examples](#) page?

If you have done all the above and still can't find an answer to your question, [contact our Technical Support team](#).

## 8.2 Status Indicator LED

| LED                       | 10GigE   |
|---------------------------|--|
| No Light                  | No power<br>or LED is in inactive state<br>or LED is in error status state with no error |
| Blinking Green (1 blink)  | Link-Local Address (LLA)   |
| Blinking Green (2 blinks) | DHCP IP Address  |
| Blinking Green (3 blinks) | Persistent IP Address  |
| Solid Green               | Acquisition Started  |
| Solid Red                 | Link down  |
| Rapid Flashing Green      | Firmware update in progress  |
| Flashing Green and Red    | General Error  |

### 8.2.1 Network Status LEDs

|                             |                       |
|-----------------------------|-----------------------|
| No Light                    | No network connection |
| Left and Right Bright Green | 10 GigE connection    |

**Left Dim and Right Bright Green**

1 GigE connection

**Left and/or Right Blinking Green**

Data transfer in progress

# Contacting Teledyne FLIR IIS

For any questions, concerns or comments please contact us:

|                       |  |
|-----------------------|--|
| <b>Email</b>          | <a href="#">General questions</a>  |
| <b>Support Ticket</b> | <a href="#">Technical support</a>  |
| <b>Support Forum</b>  | <a href="#">Teledyne FLIR IIS Community</a>  |
| <b>Website</b>        | Find specifications, support articles, downloads on the website <a href="#">Teledyne FLIR IIS machine vision</a> |

## Revision History

| Version    | Date              | Description   |
|------------|-------------------|---|
| <b>1.0</b> | October 27, 2017  | Support for ORX-10G-51S5, ORX-10G-89S6, and ORX-10G-123S6   |
| <b>2.0</b> | August 9, 2019    | Support for ORX-10G-310S9 and ORX-10G-71S7  |
| <b>3.0</b> | August 20, 2019   | Support for ORX-10G-32S4  |
| <b>4.0</b> | February 21, 2020 | Support for ORX-10GS-32S4, ORX-10GS-51S5, ORX-10GS-89S6, and ORX-10GS-123S6<br>Updated recommended system configuration                       |
| <b>4.1</b> | April 9, 2020     | Updated link to contact support<br>Updated GPIO electrical and input / output timing  |
| <b>5.0</b> | October 29, 2020  | Support for ORX-10G-245S8   |
| <b>5.1</b> | September 9, 2021 | Support for custom model 97-02800-00100<br>Usage statement added to legal page.<br>Additional warning for hot surface in Temperature section. |
| <b>5.2</b> | November 29, 2022 | Updated links to camera website resources<br>Branding to Teledyne FLIR  |
| <b>5.3</b> | March 20, 2025    | Updated to new website links<br>Clarified only 10GigE or 1GigE speed for Interface Card   |